
DECK MOUNT TUB FILLER INSTALLATION INSTRUCTIONS MODEL : 1400-4272, 1400-4273 1500-4272, 1500-4273

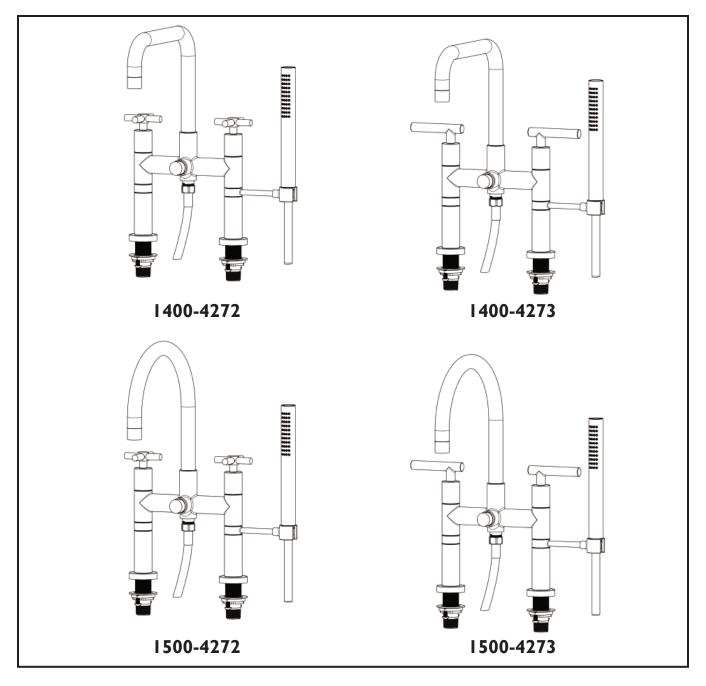


NEWPORT BRASS

2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM

We recommended installation of this product by a Professional Plumbing Contractor


- **Note:** The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials. Recommended hole 2@ Ø1.25" to Ø1.38" and 7" apart center to center.
- I. Insert both NIPPLES (I) through pre-drilled holes. See Figure I.
- 2. Secure the faucet with MOUNTING KIT (2). See Figure 2.
- 3. Connect to water supply to the 3/4 NPT NIPPLES (1). Note: do not apply heat to nipples directly. See Figure 3.
- 4. Attach the hand shower spray HOSE (3), remove the FLOW STRAIGHTENER (4) assembly, and flush the tub filler. Divert the flow to the HOSE (3) to flush as well. See **Figure 4**.
- 5. Reinstall FLOW STRAIGHTENER (4) assembly and attach HANDSHOWER (5) to HOSE (3). See **Figure 4**.

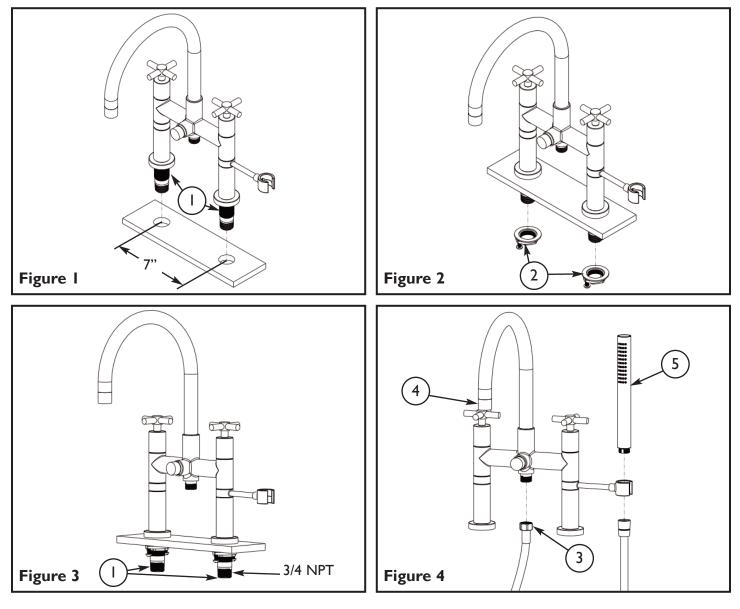

Hand shower holder adjustment about the axis of the riser.

Note: Following steps are to adjust the hand shower holder about the axis of the riser.

- I. A 7/16 hex key is required.
- 2. Unscrew the HANDLE (6) assembly on the side with the HOLDER (7). See Figure 5.
- 3. Remove the CARTRIDGE (8). See Figure 5.
- 4. Using the 7/16 hex key loosen the visible NUT (9) just enough to move the HOLDER (7). Do not fully back out the nut. See **Figure 6**.
- 5. Adjust the HOLDER (7) to the desired location and tighten the NUT (9) to lock it in place. See Figure 7.
- 6. Install the CARTRIDGE (8) and torque to 15-20 ft-lbs. See Figure 8.
- 7. Install the HANDLE (6) assembly. See Figure 8.

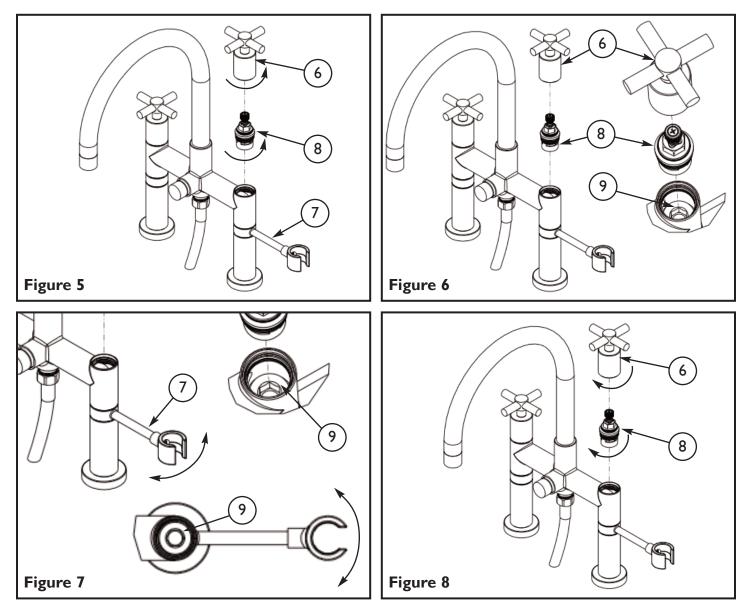

NWP-1500-4272

Hand shower holder adjustment about the axis of the holder arm.

Note: Following steps are to adjust the hand shower holder about the axis of the holder arm.

- I. 5/32 hex key needed; T handle recommended.
- 2. Slowly loosen the SCREW (10) visible inside the HOLDER (7) until it is possible to move the HOLDER (7). See **Figure 9**. Notches should be felt as the HOLDER (7) is rotated. See **Figure 10**. If HOLDER (7) moves but notches aren't felt, the screw was loosen too much.
- 3. Once HOLDER (7) is at desired location, tighten the 5/32 hex SCREW (10). See Figure 10.

