

2 Tier Towel Shelf

Installation Instructions

Model No. 10-34, 16-34, 19-34

Recommended Installation by a Professional Contractor

1. Measure the appropriate distance, 24", between plate centers. (See Fig. 1)



Note: Hole locations should be level.

2. Hold SHELF (1) unit up to mounting surface, check that the unit is level. Mark the hole pattern location from the WALL PLATES (2) onto the mounting surface.

3. Drill hole(s) in wall at points marked using the appropriate drill size:

- Wood Screw (#8 x 1 3/4") - use: 1/8" Drill
- Anchor - use: 3/16" Drill

4. Fasten WALL PLATES (2) to wall using either WOOD/ANCHOR SCREWS (3).
(See Fig. 2)

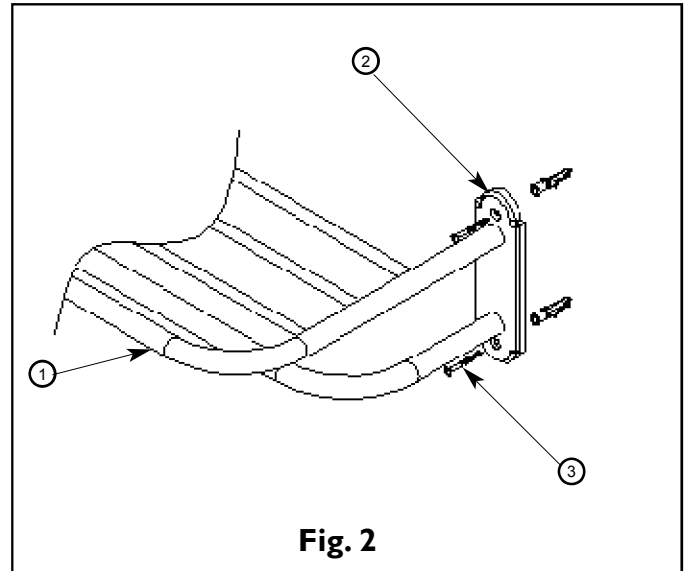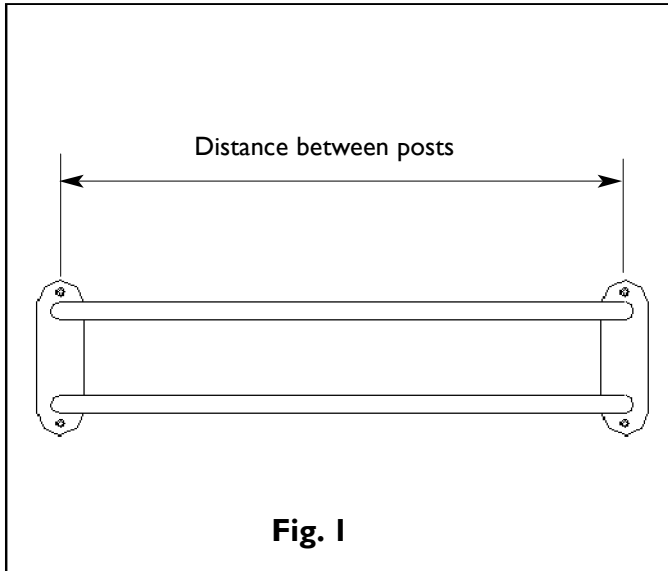

NEWPORT BRASS
The Luxury of Style

(949)417-5207

Santa Ana CA 92705

www.brasstech.com