
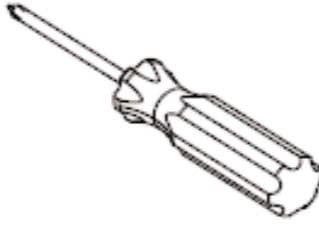

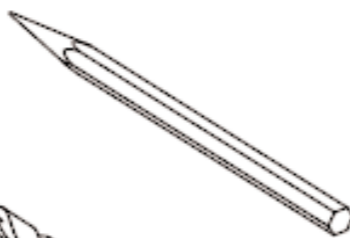

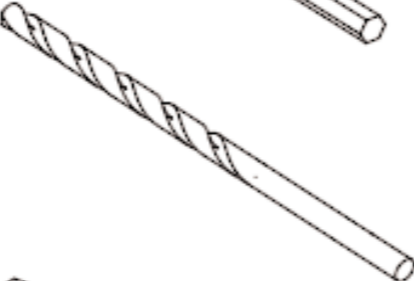

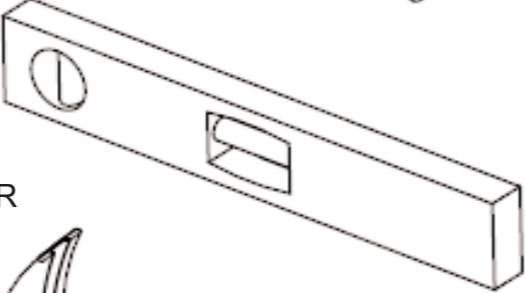

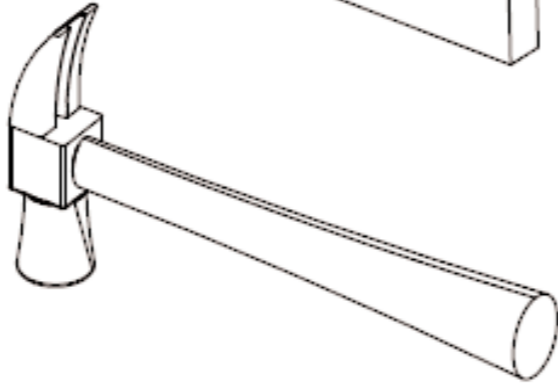

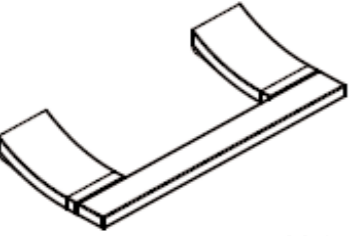


| ITEMS INCLUDED                   |   | TOOLS REQUIRED        |  |
|----------------------------------|---|-----------------------|--|
| DRY WALL ANCHOR                  |  X 4   | PHILLIPS SCREW DRIVER |    |
| TILE ANCHOR                      |  X 4   | PEN / PENCIL          |    |
| #8 SCREW                         |  X 4   | 1/4" (6 mm) DRILL     |   |
| MOUNTING BRACKET                 |  X 2   | LEVEL SET             |  |
| 1/4-28 SET SCREW                 |  X 2 | HAMMER                |  |
| 1/8" HEX KEY                     |  X 1 |                       |  |
| DOUBLE POST TOILET TISSUE HOLDER |  X 1 |                       |  |

# SECANT

## INSTALLATION INSTRUCTIONS

37-28


### DOUBLE POST TOILET TISSUE HOLDER

**NEWPORT BRASS**<sup>®</sup>


*Flawless Beauty. From Faucet to Finish.<sup>™</sup>*

2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

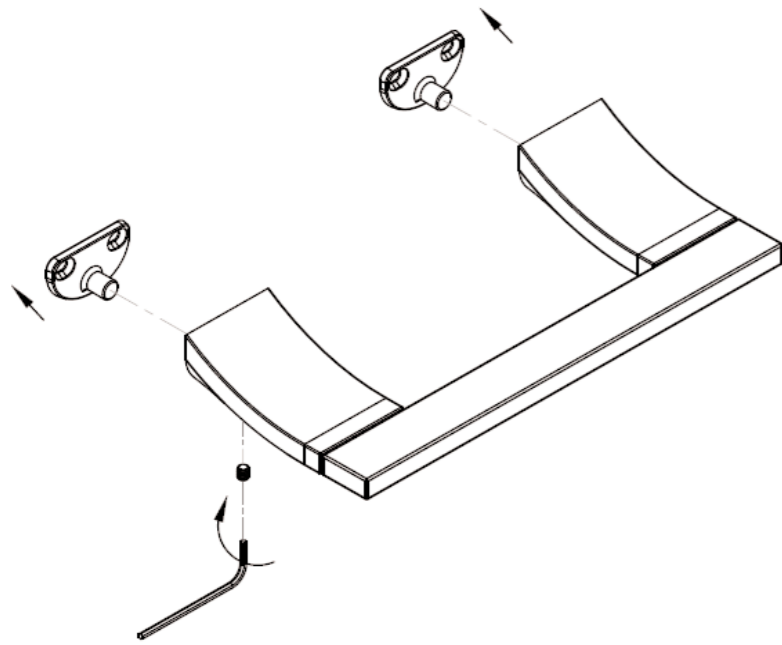

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

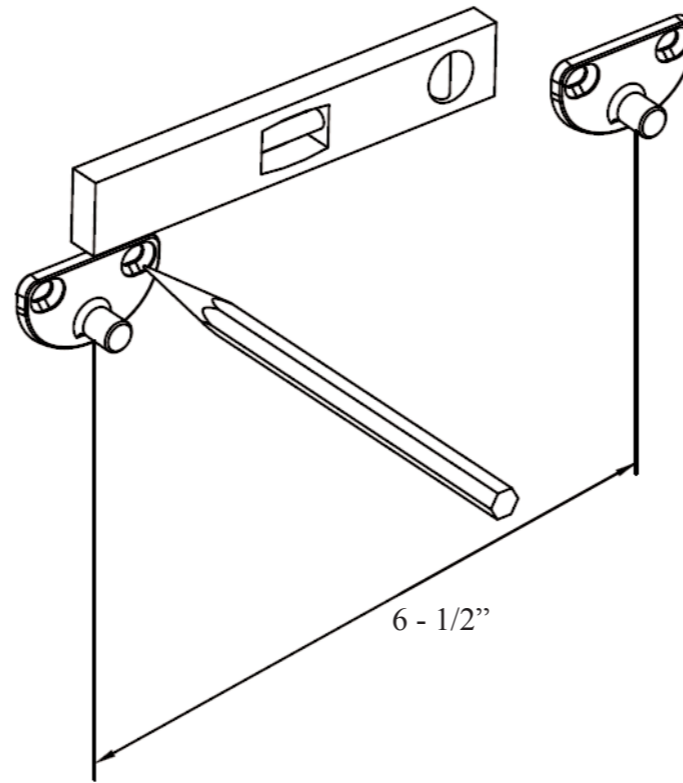


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS  
MADE IN STEP 2

TAP IN UNTIL  
THREADS ARE  
REACHED

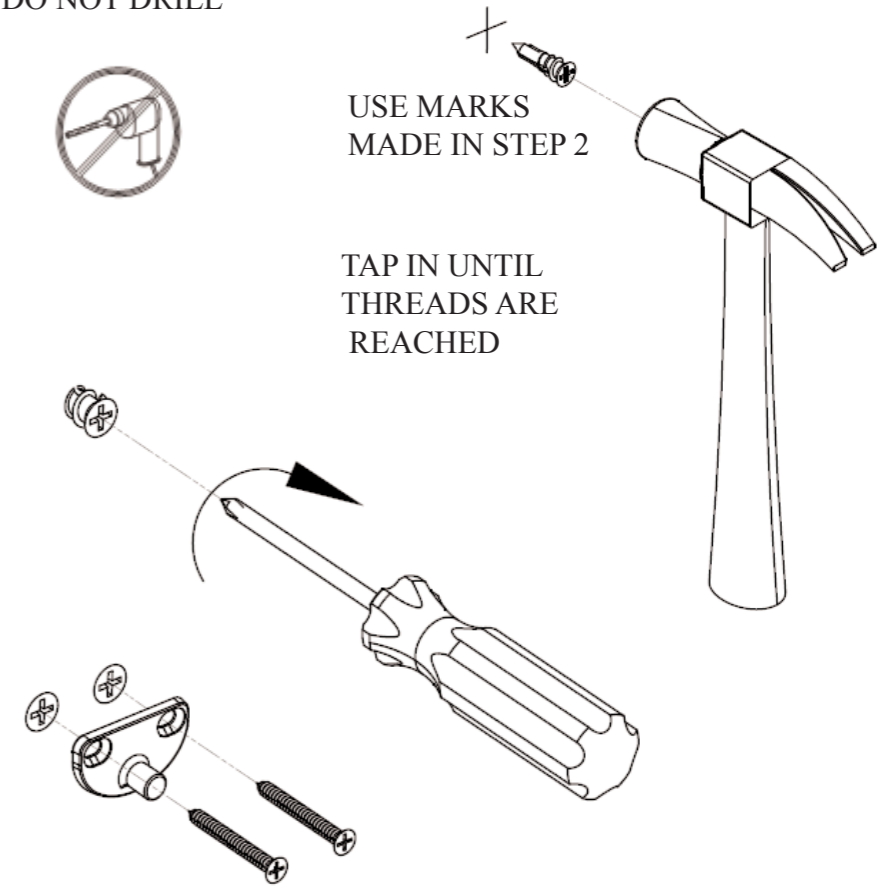


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

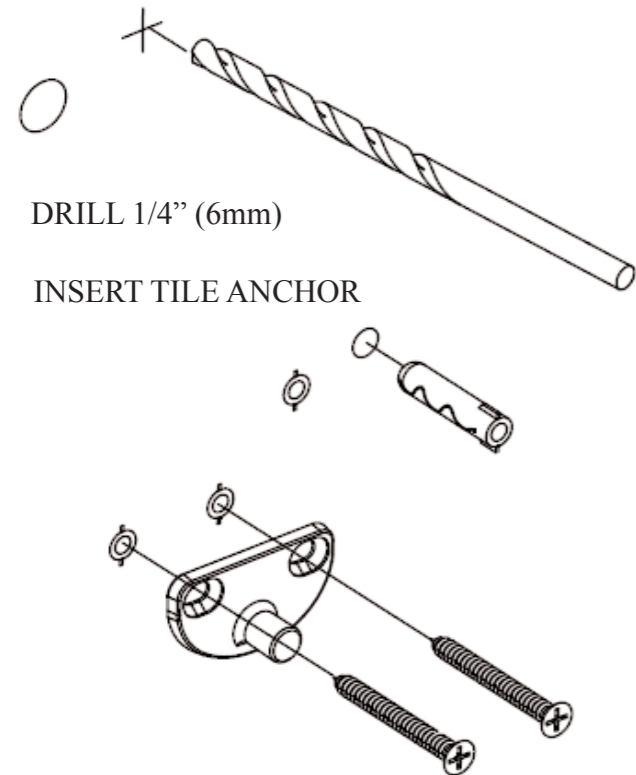

⑤ INSTALL PRODUCT ONTO BRACKETS

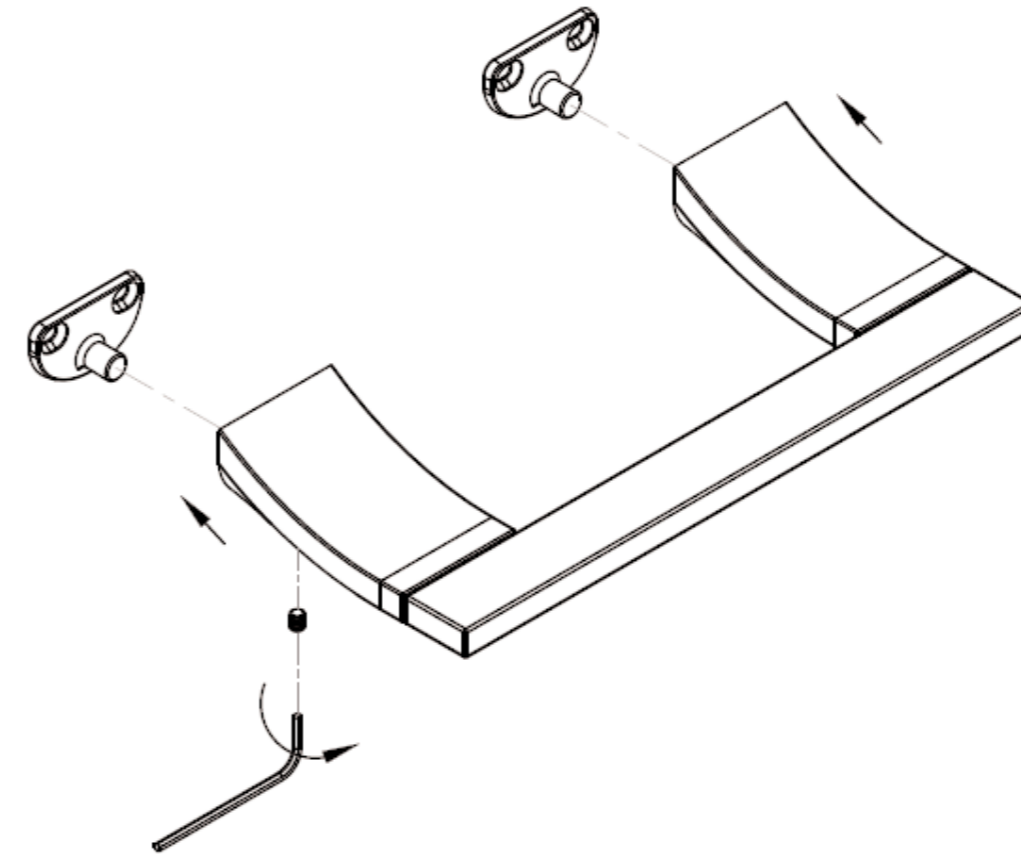

SECURE WITH SET SCREW