



NOTES:

1. TO INSPECT ASSEMBLY, FOLLOW FIRST ARTICLE AND IN PROCESS INSPECTION SHEET.

- 2 APPLY PLAMER MIRROR MASTIC
- 3 APPLY LOCTITE 680.
- 4 LOCATION FOR VHB TAPE

BILL OF MATERIAL (CURRENT LEVEL)

ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY.
1	MTM-002	MOUNTING KIT	ASSEMBLY	1
2	F1141-CB	MIRROR TIE ROD ASSEMBLY	ASSEMBLY	1
3	MTM-003	MIRROR VERTICAL CHANNEL	PART	2
4	F114X-SC	SIDE ARM ASSEMBLY	ASSEMBLY	1
5	C1141	MIRROR GLASS	PART	1
6	91477	ADHESIVE BACKED BUMPER	PART	2
7	91462	VHB TAPE 1" X 1 1/2" LONG	PART	4
8	92398	SCRW, M5 X .8 X 8 PHIL PAN HD Zn PLATED	PART	4

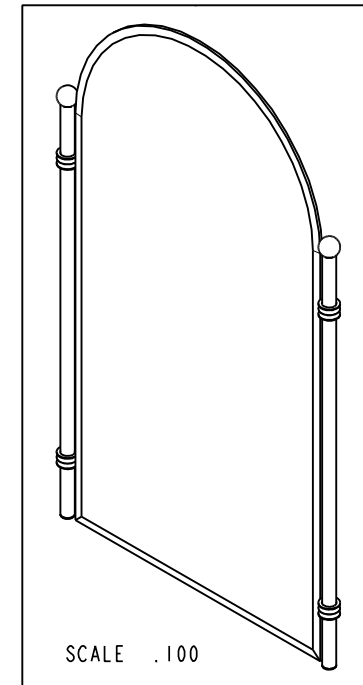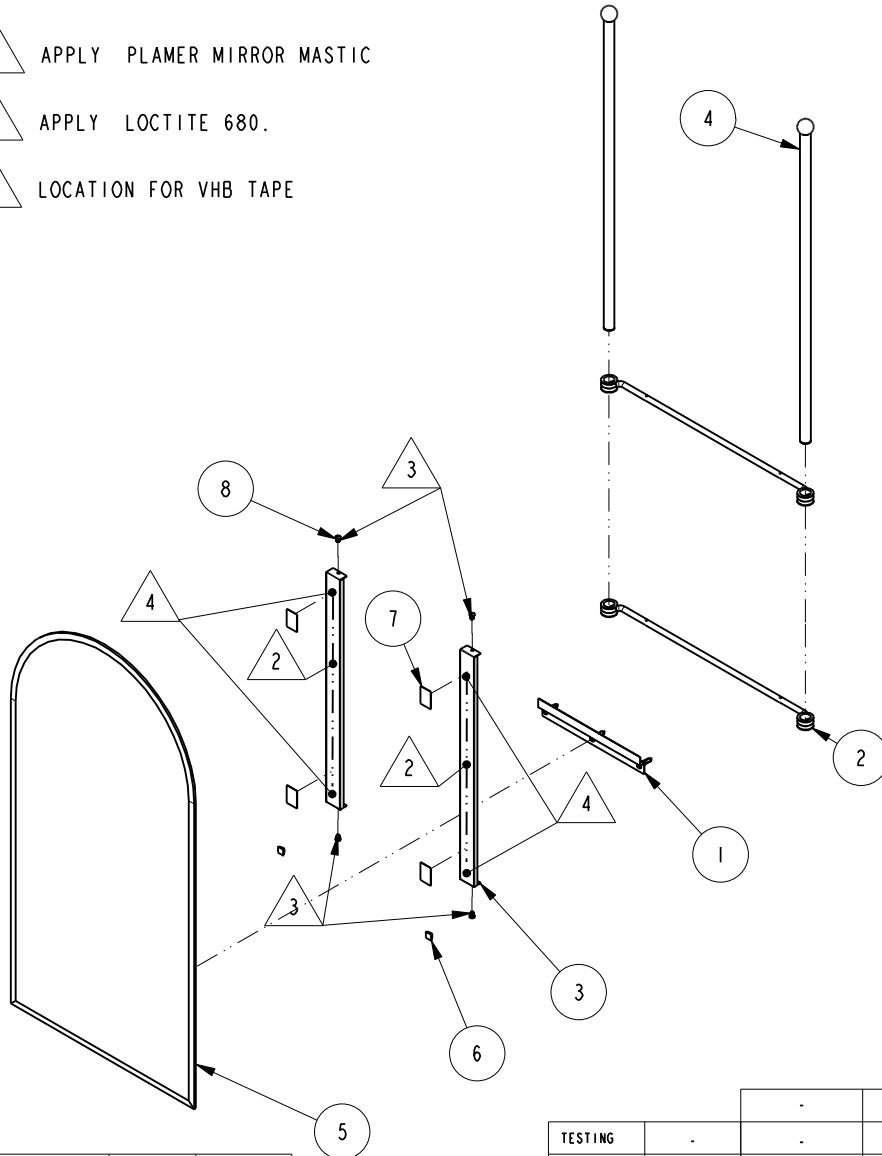

SCALE .100

UNITS ARE: INCHES [MM]

TOLERANCES ARE:

FRACTIONS DECIMALS ANGLES
±1/16" .X ±.1 [2.5] ±1°
.XX ±.06 [1.5]

(X.XXX) DENOTES CRITICAL DIMS.
ALL THREADS ARE CRITICAL

DRAWN JINSON 06/16/21
CHECKED R.S. 06/16/21
APPROVED R.S. 06/16/21

BRASSTECH
INCORPORATED

2001 CARNEGIE AVE.
SANTA ANA, CA 92705
(949) 417-5207

**CHELSEA SMALL BEVELED
FRAMED MIRROR**

DWG NO.

1141

REV
D

SCALE .075

REF. -

SHEET 1 OF 3

COPYRIGHT 2005 BRASSTECH, INC.
THESE DRAWINGS AND THE DESIGNS
DEPICTED HEREIN ARE THE PROPRIETARY
PROPERTY OF BRASSTECH. ANY
USE OR REPRODUCTION IS SUBJECT TO
THE EXPRESS APPROVAL OF BRASSTECH.
UNAUTHORIZED USE IS STRICTLY
PROHIBITED. ALL RIGHTS RESERVED.

TESTING	-	-	-
ASSEMBLY	-	-	-
PLATING	-	-	-
POLISHING	-	NEXT ASSY	USED ON
MACHINING	-	APPLICATION	
TOOLING FIXTURE #	REMOVE ALL BURRS AND SHARP EDGES		

-	D	EN-4300p	06/16/21	R.S.
-	C	EN-2270	09/03/12	-
-	B	EN-2148	04/30/12	-
-	A	EN-1457	02/02/10	-
ZONE	REV	DESCRIPTION	DATE	APPROVED

