
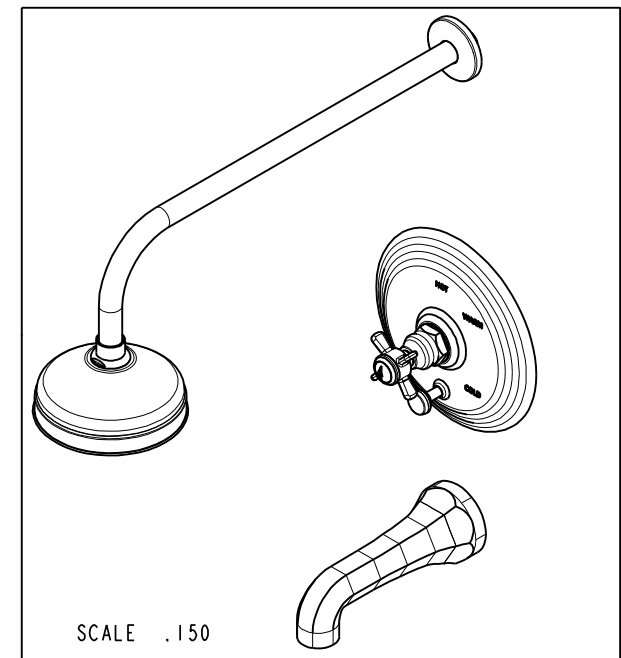


1. TO INSPECT ASSEMBLY, FOLLOW FIRST ARTICLE AND IN PROCESS INSPECTION SHEET.
2. SEAL NUT 10259 IN A PLASTIC BAG AND TAPE TO THE BACK OF THE TRIM PLATE.
3. PLUMBER REQUIRED TO APPLY TEFLON TAPE.

ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY.
1	2-144	WALL TUB SPOUT - HEX	ASSEMBLY	1
2	206	SHOWER ARM FLANGE	PART	1
3	2021	90" 18" SHWR ARM	PART	1
4	2-224	COVERPLATE BP W/DIVERTER	ASSEMBLY	1
5	3-230	HANDLE/ESC ASM - DIVERTER	ASSEMBLY	1
6	209	SHOWER HEAD 6" DIA.	ASSEMBLY	1
7	2-217	DIVERTER TRIM KIT	ASSEMBLY	1
8	10259	HEX NUT 9/16 X 20 MADE	PART	1

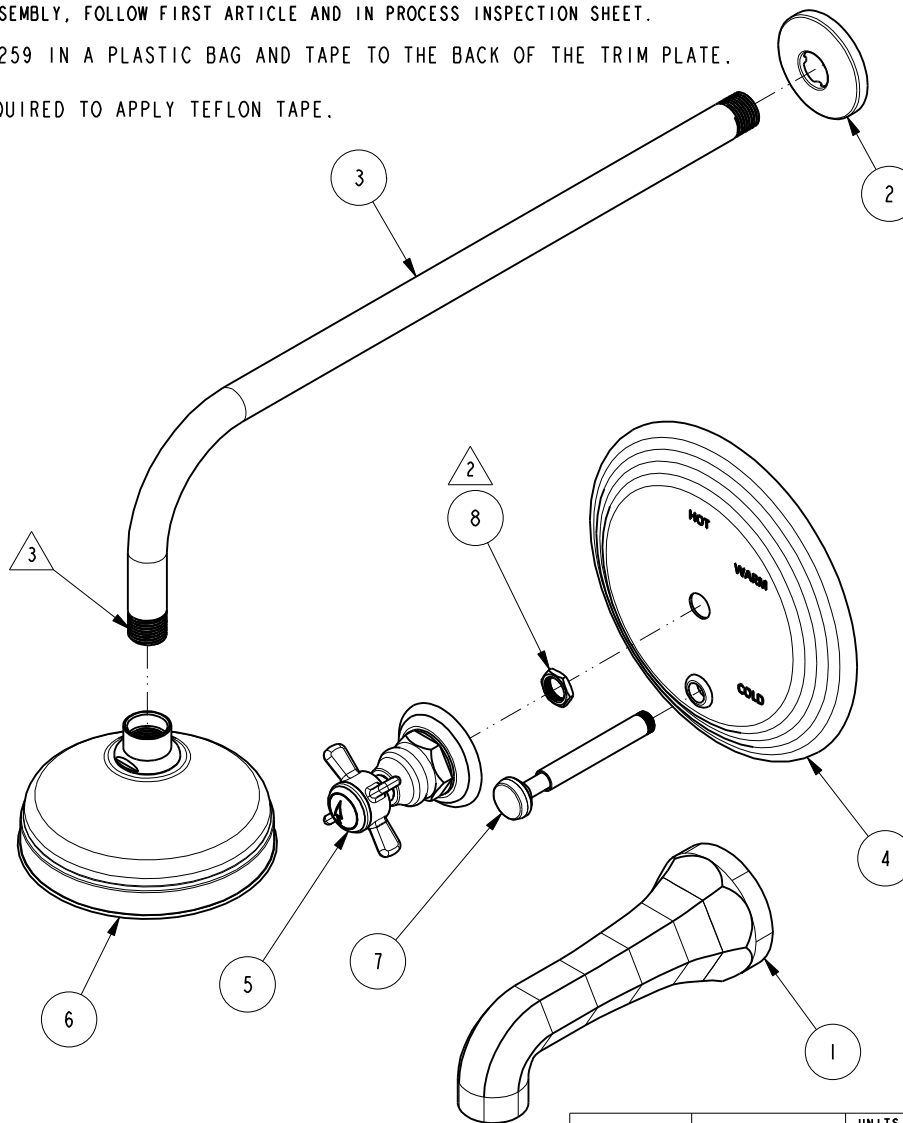

-	E	EN-4441	04/18/22	N.S.
-	D	EN-4300e	04/28/21	R.S.
-	C	EN-2677	01/16/14	-
-	B	EN-1551	05/06/10	-
-	A	-	04/03/01	-
ZONE	REV	DESCRIPTION	DATE	APPROVED

COPYRIGHT 2005 BRASSTECH, INC.
THESE DRAWINGS AND THE DESIGNS
DEPICTED HEREIN ARE THE PROPRIETARY
PROPERTY OF BRASSTECH. ANY USE
OR REPRODUCTION IS SUBJECT TO
THE EXPRESS APPROVAL OF BRASSTECH.
UNAUTHORIZED USE IS STRICTLY
PROHIBITED. ALL RIGHTS RESERVED.

TESTING	-	-	-
ASSEMBLY	-	-	-
PLATING	-	-	-
POLISHING	-	NEXT ASSY	USED ON
MACHINING	-	APPLICATION	
TOOLING FIXTURE #		REMOVE ALL BURRS AND SHARP EDGES	

CHECKED	N.S.	04/18/22
APPROVED		

2001 CARNEGIE AVE.
SANTA ANA, CA 92705
(949) 417-5207

TRIM KIT

NO. 3-1002BP

REV	
E	

SCALE 250

REF. -

SHEET | OF 2

