
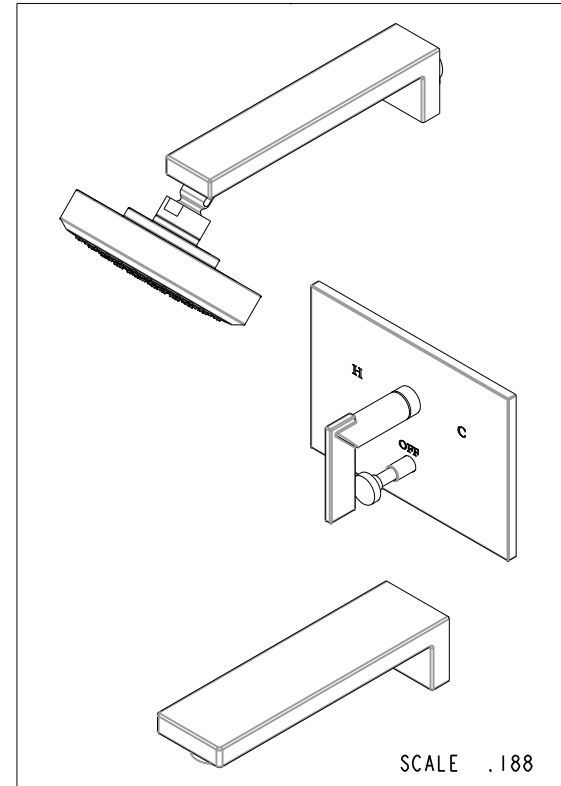


NOTES:

1. TO INSPECT ASSEMBLY, FOLLOW FIRST ARTICLE AND IN PROCESS INSPECTION SHEET.

BILL OF MATERIAL (CURRENT LEVEL)

ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY.
1	8-031	DIVERTER TRIM	ASSEMBLY	1
2	8-032	TUB & SHOWER PLATE ASM	ASSEMBLY	1
3	8-030	WALL TUB SPOUT ASM	ASSEMBLY	1
4	201-2	9" SHOWER ARM [METRO]	ASSEMBLY	1
5	20-300	LEVER ASM	ASSEMBLY	1
6	2141	CONTEMP. SHOWER HEAD - SINGLE JET	ASSEMBLY	1
7	2-894	DIVERTER TRIM KIT (SHORT)	ASSEMBLY	1

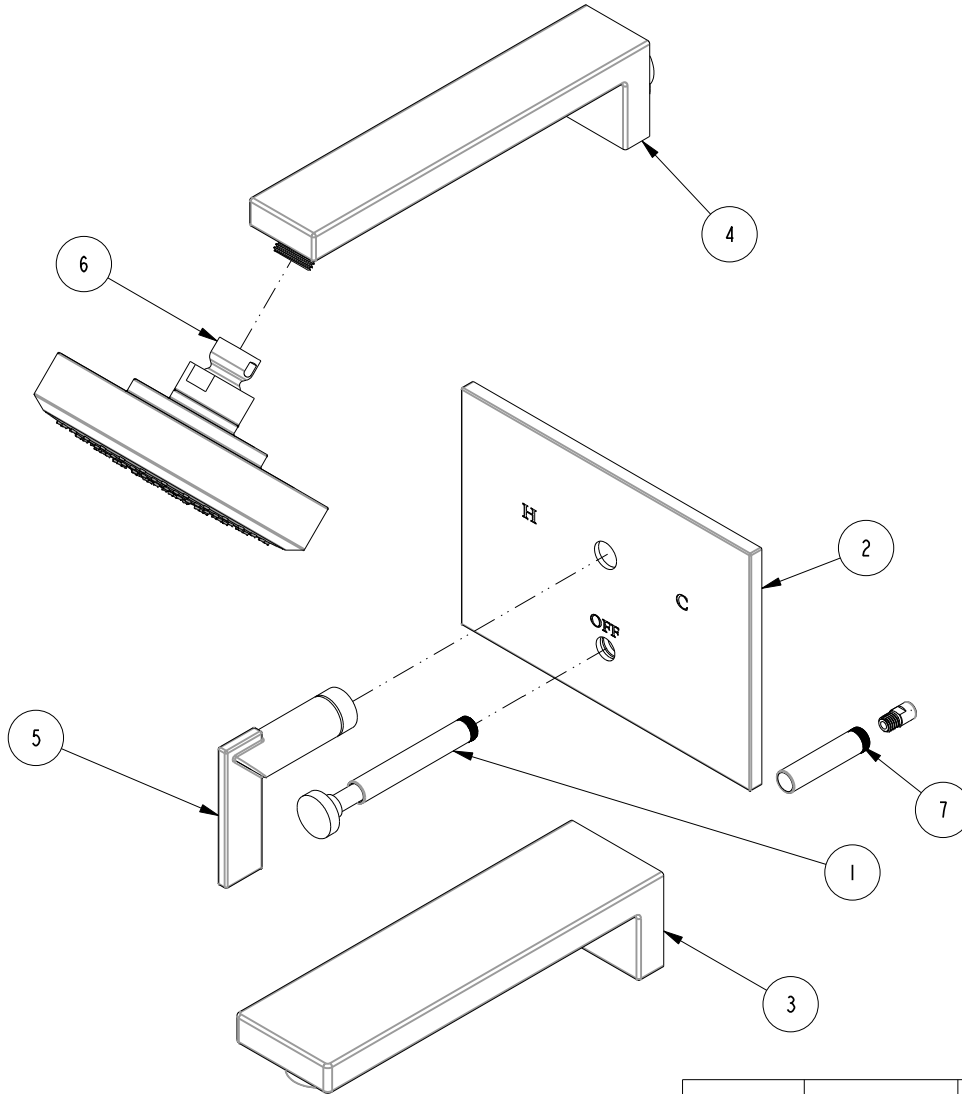


-	H	EN-4163d	07/23/21	N.S.
-	G	EN-3334	01/09/18	J.A.
-	F	EN-3178	11/01/16	J.M.
-	E	EN-2452	02/07/13	J.M.
-	D	EN-2068	02/09/12	J.M.
ZONE	REV	DESCRIPTION	DATE	APPROVED

COPYRIGHT 2005 BRASSTECH, INC. THESE DRAWINGS AND THE DESIGNS DEPICTED HEREIN ARE THE PROPRIETARY PROPERTY OF BRASSTECH. ANY USE OR REPRODUCTION IS SUBJECT TO THE EXPRESS APPROVAL OF BRASSTECH. UNAUTHORIZED USE IS STRICTLY PROHIBITED. ALL RIGHTS RESERVED.

		-	-
TESTING	-	-	-
ASSEMBLY	-	-	-
PLATING	-	-	-
POLISHING	-	NEXT ASSY	USED ON
MACHINING	-	APPLICATION	
TOOLING FIXTURE #		REMOVE ALL BURRS AND SHARP EDGES	

UNITS ARE: INCHES [MM]			
TOLERANCES ARE:			
FRACTIONS	DECIMALS	ANGLES	
$\pm 1/16"$	$.X \pm .1$ [2,5]	$\pm 1^\circ$	
	$.XX \pm .06$ [1,5]		
(X.XXX) DENOTES CRITICAL DIMS. ALL THREADS ARE CRITICAL			
DRAWN	JINSON	04/28/21	
CHECKED	R.S.	04/28/21	
APPROVED	R.S.	04/28/21	

BRASSTECH		2001 CARNEGIE AVE. SANTA ANA, CA 92705 (949) 417-5207	
INCORPORATED			
BP SHOWER TRIM SET			
DWG NO.		REV	
3-2542BP		H	
SCALE	.275	REF. -	SHEET 1 OF 2

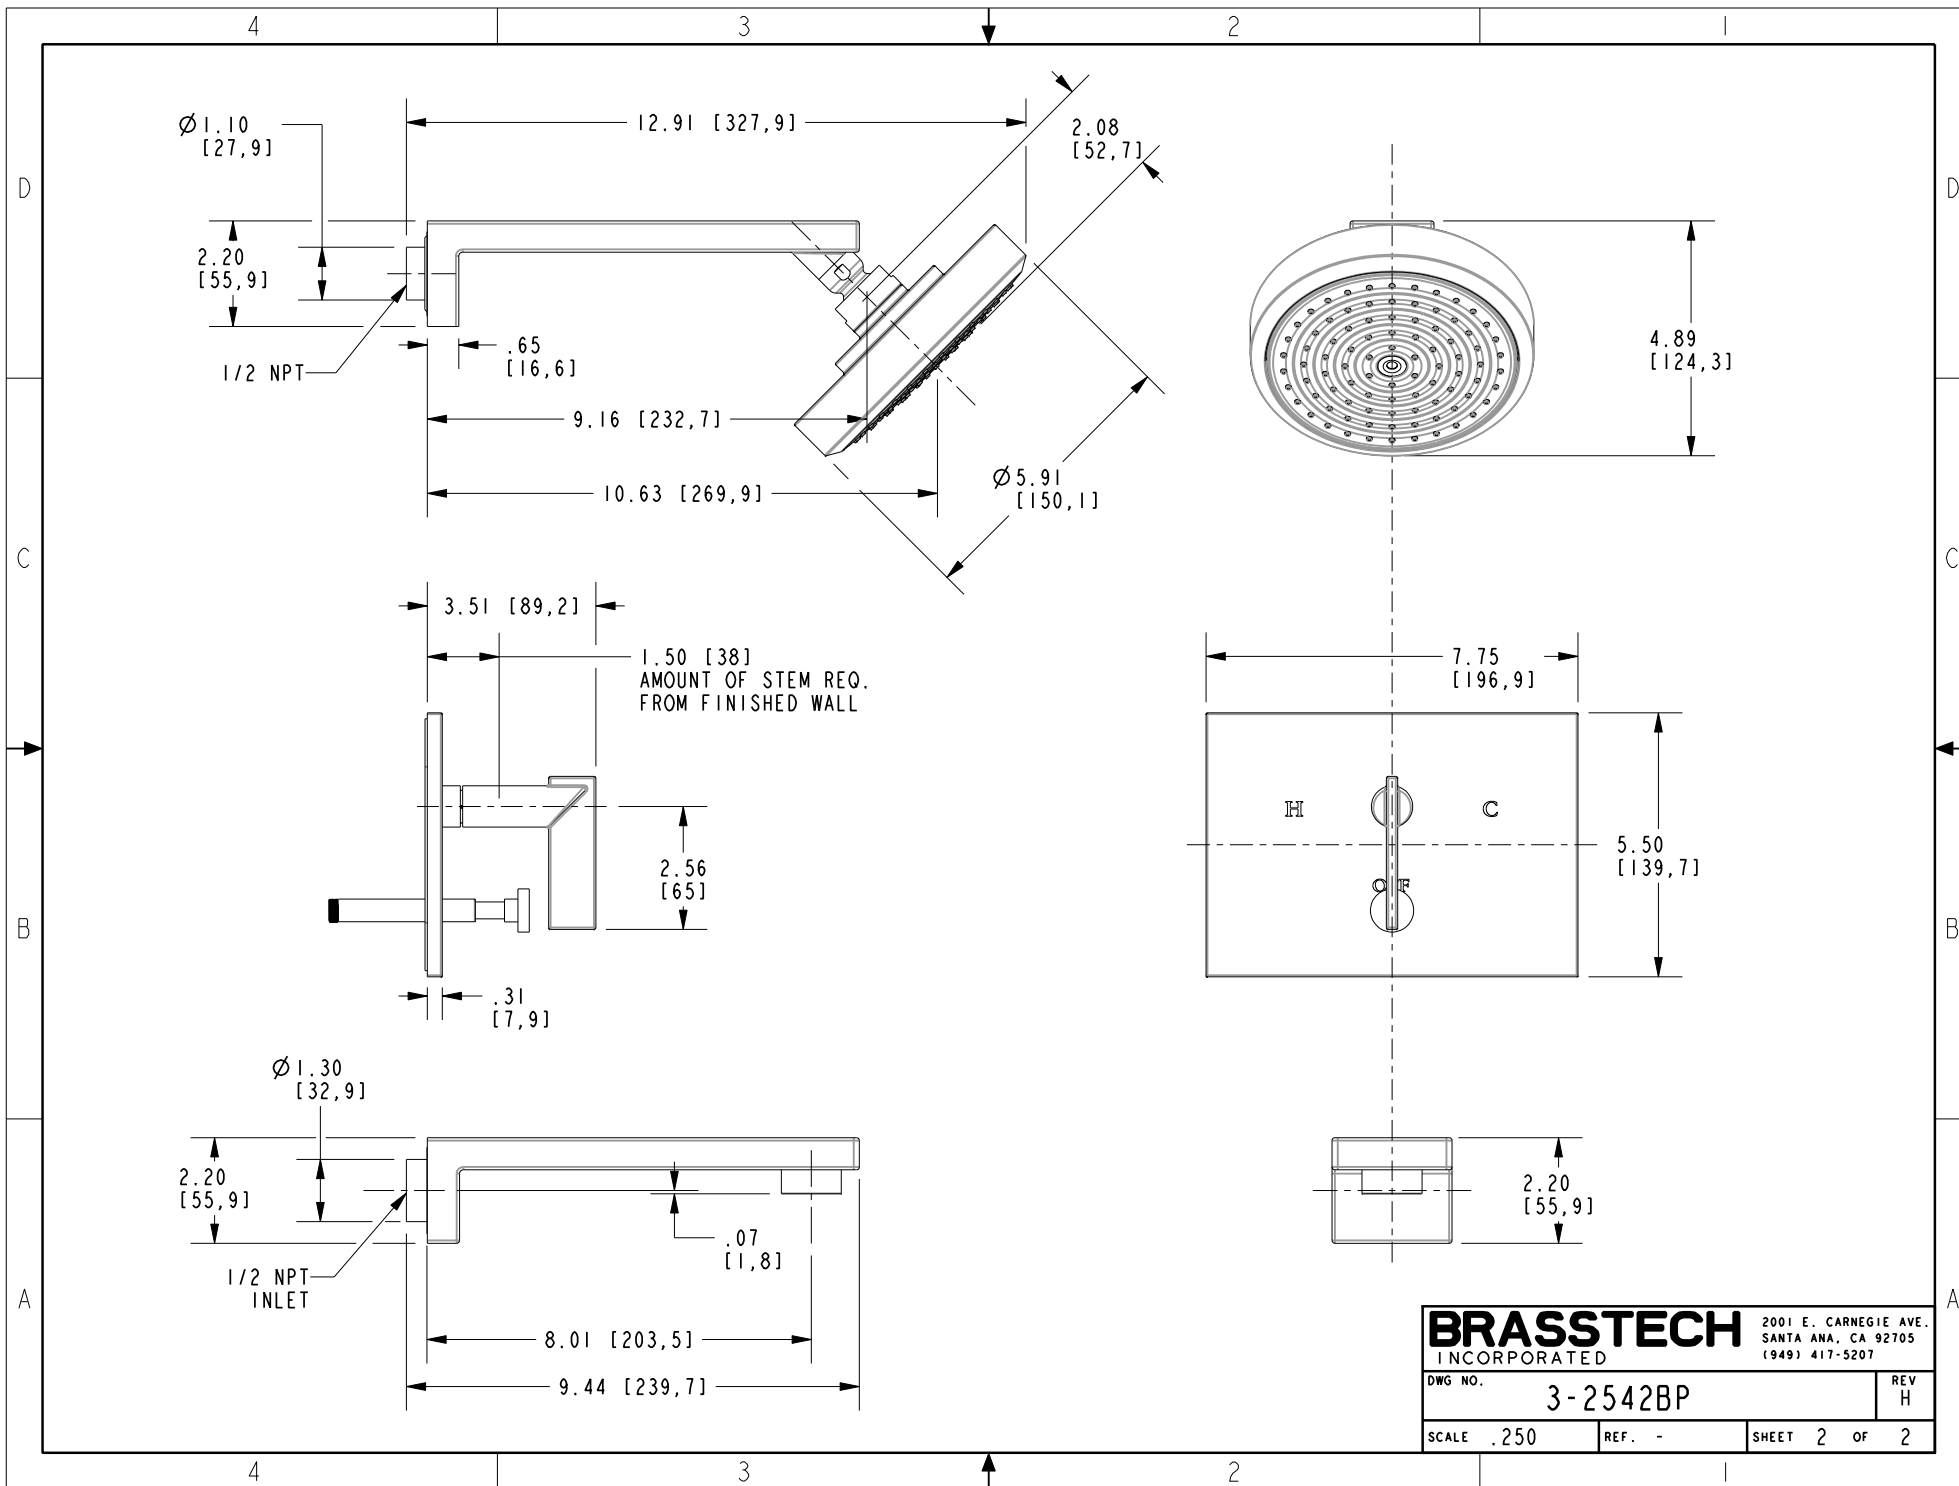

BRASSTECH INCORPORATED		2001 E. CARNEGIE AVE. SANTA ANA, CA 92705 (949) 417-5207	
DWG NO.	3-2542BP		REV H
SCALE .250	REF. -	SHEET 2	OF 2