


INSTALLATION INSTRUCTIONS

EXTENSION KIT

Model No: 325 I

Recommended Installation by a Professional Plumbing Contractor

1. Connect pop-up ROD (1) to extension kit (# 3251).
2. Connect extension kit (# 3251) to STRAP (3). Drilling extra holes on STRAP (3) may be required to adjust to desired height.
3. Adjust CLIP (5) to desired length until the flange of Pop-up 325 can fully close and open. Ensure STRAP (3) fits between CLIP (5).
4. Secure STRAP (3) with extension kit (# 3251) by threading SCREW (6).

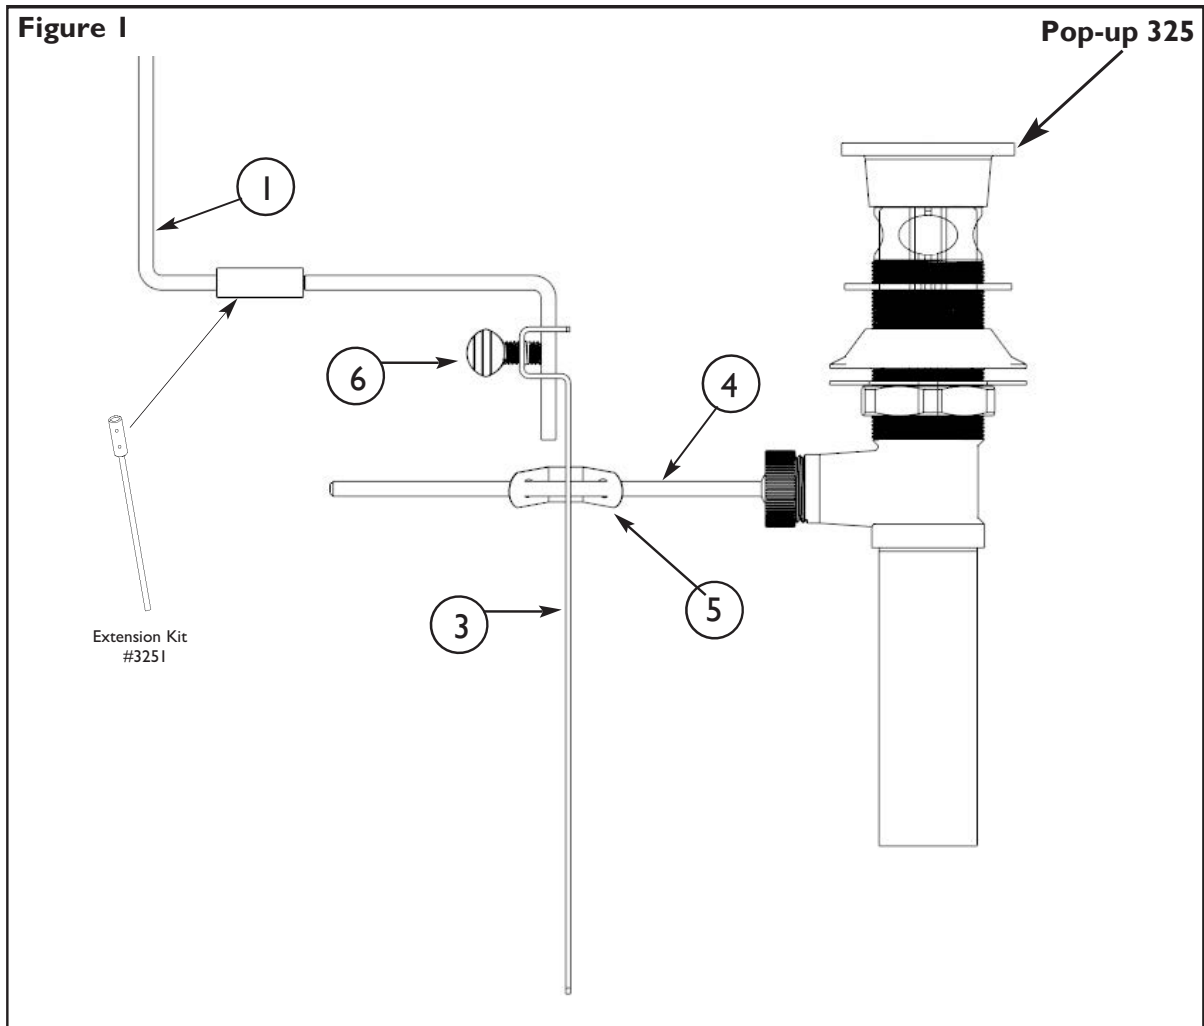

Note: Items 3, 4, 5, 6 come included with Pop-up 325 (sold separately).
Hand tube bender may be required to connect items.