ITEMS INCLUDED

DRY WALL ANCHOR X 2

TILE ANCHOR X 2

#8 SCREW X 2

MOUNTING BRACKET X 1

M6X1 SET SCREW X 1

3MM HEX KEY X 1

SINGLE ROBE HOOK 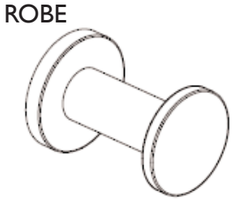 X 1

TOOLS REQUIRED

PHILLIPS SCREW DRIVER 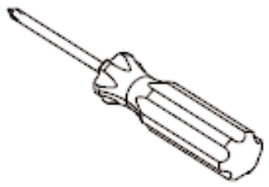

PEN / PEN-CIL

1/4” (6 mm) DRILL

LEVEL SET 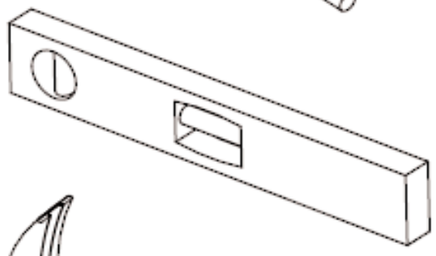

HAMMER 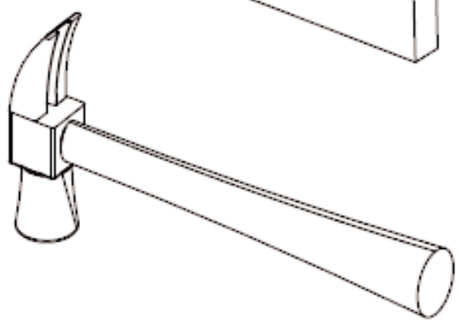

INSTALLATION INSTRUCTIONS

SINGLE ROBE HOOK

BRASSTECH®

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM
WWW.NEWPORTBRASS.COM

1 REMOVE MOUNTING BRACKET

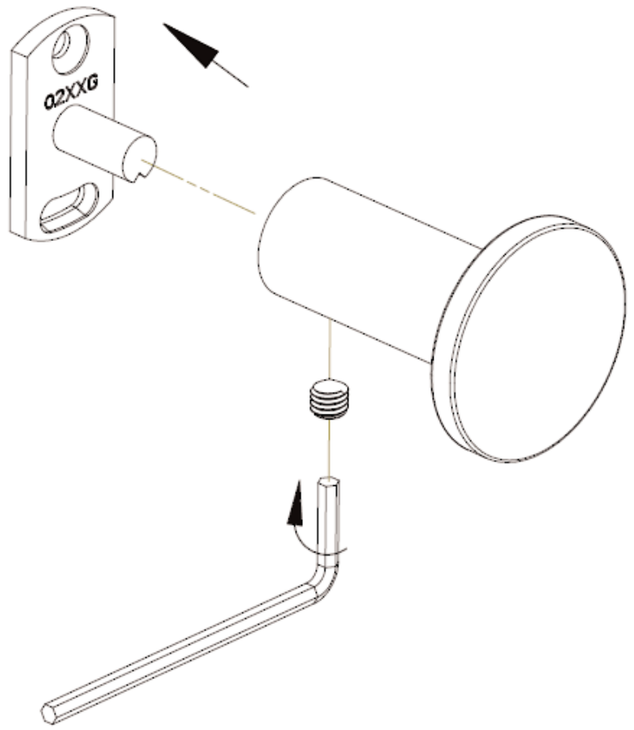

2 ALIGN MOUNTING BRACKET AND MARK LOCATION

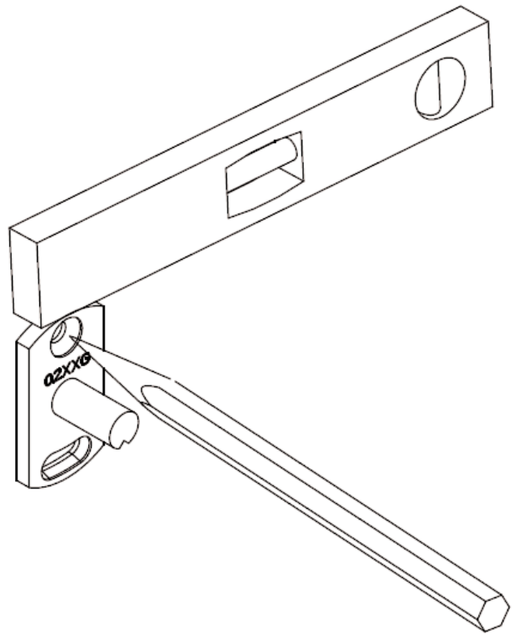

3 DRY WALL INSTALLATION

DO NOT DRILL

USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

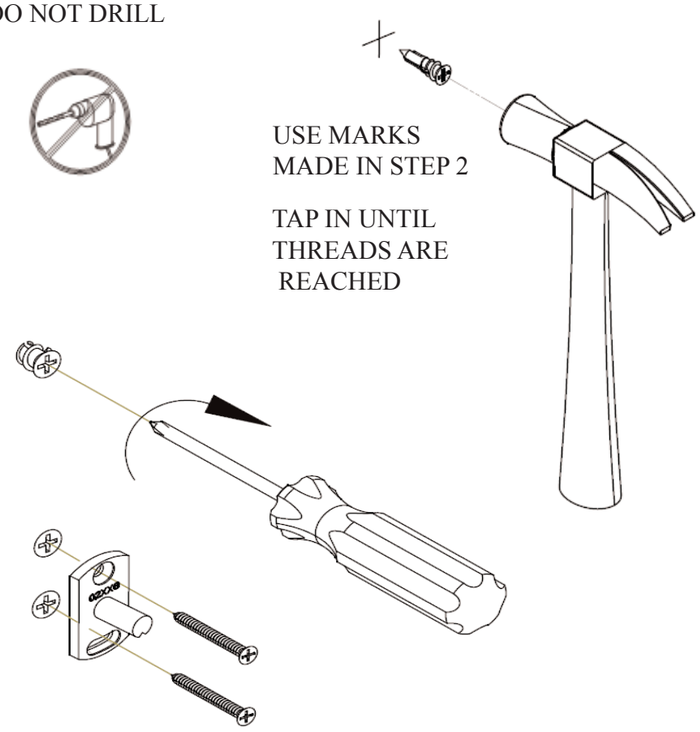

4 TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

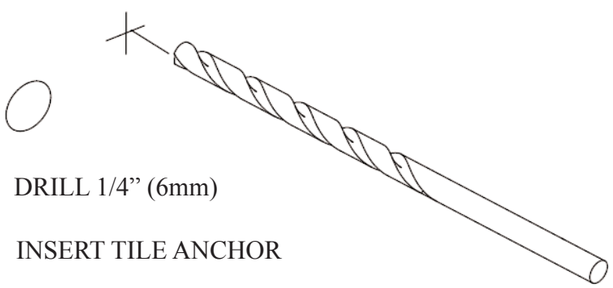

DRILL 1/4” (6mm)

INSERT TILE ANCHOR

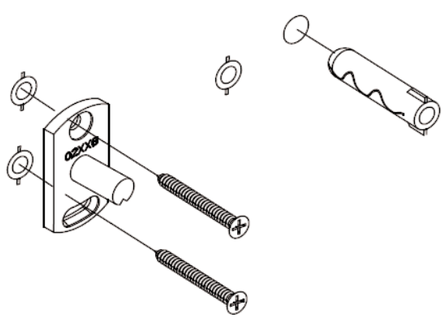
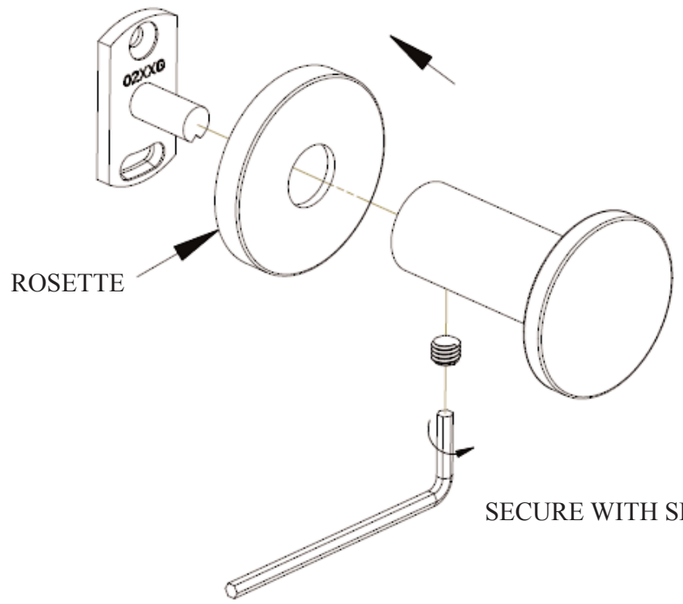
5 INSTALL PRODUCT ONTO BRACKET REGISTER ROSETTE ONTO POST AND PRESS LIGHTLY DURING INSTALLATION.