
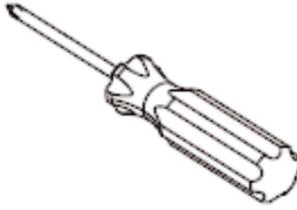
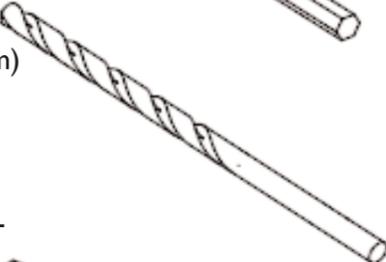
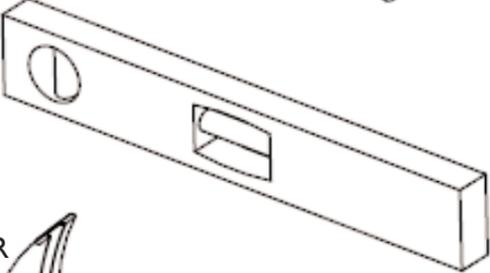
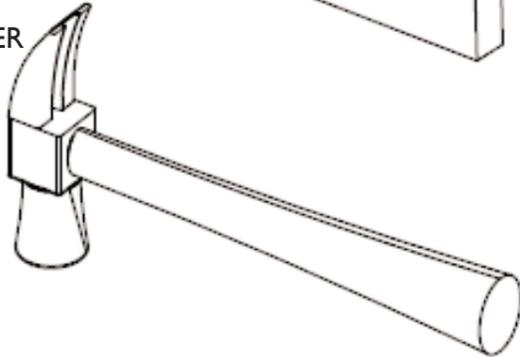


| ITEMS INCLUDED | | TOOLS REQUIRED | |
|-------------------------|---|-----------------------|--|
| DRY WALL ANCHOR |  X 2 | PHILLIPS SCREW DRIVER |  |
| TILE ANCHOR |  X 2 | PEN / PENCIL |  |
| #8 SCREW |  X 2 | 1/4" (6 mm) DRILL |  |
| MOUNTING BRACKET |  X 1 | LEVEL SET |  |
| M6 X 1 SET SCREW |  X 1 | HAMMER |  |
| 3MM ALLOY STEEL HEX KEY |  X 1 | | |
| TISSUE HOLDER |  X 1 | | |


INSTALLATION INSTRUCTIONS

TISSUE HOLDER

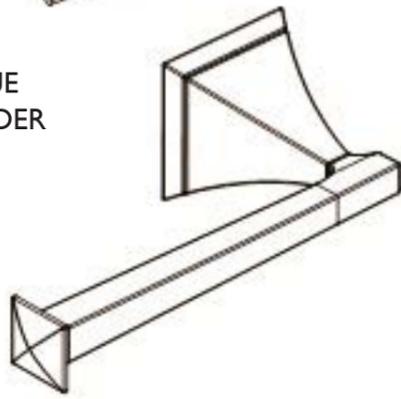


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

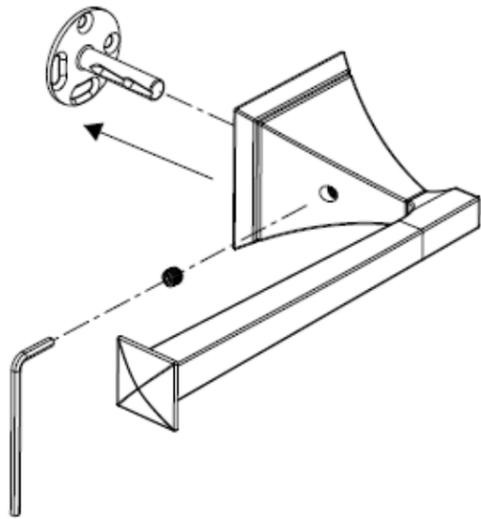

② ALIGN MOUNTING BRACKET AND MARK LOCATION

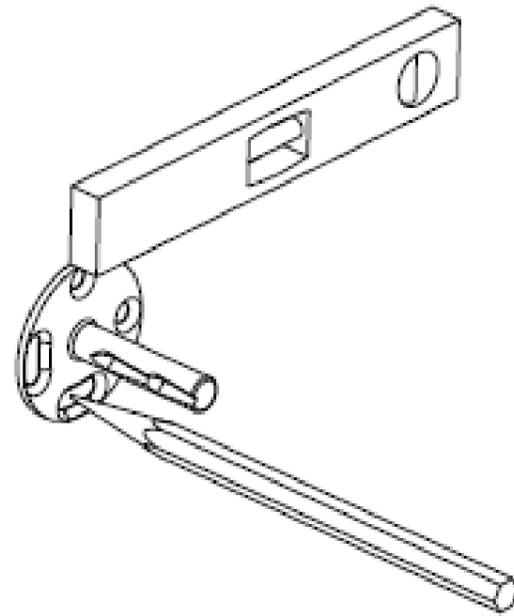


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

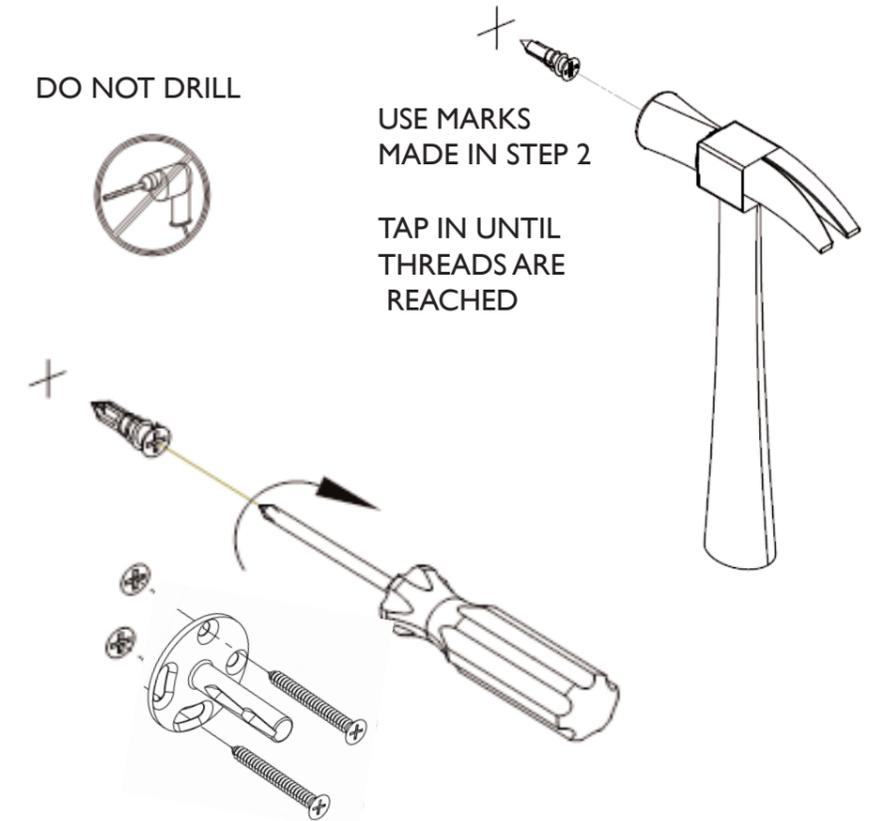


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

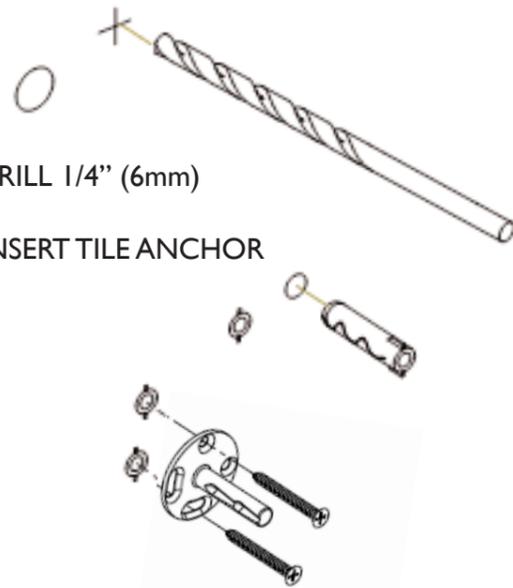

⑤ INSTALL PRODUCT ONTO BRACKET

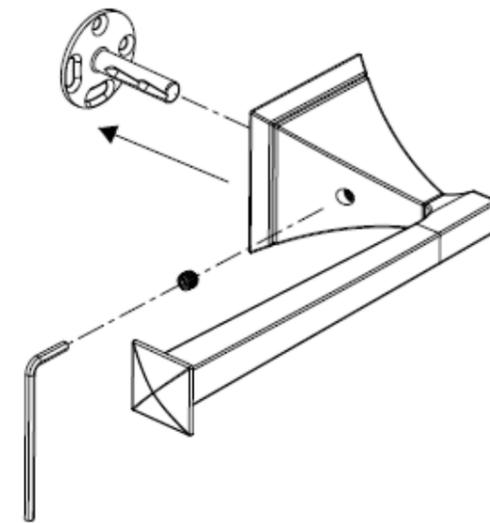

SECURE WITH SET SCREW