
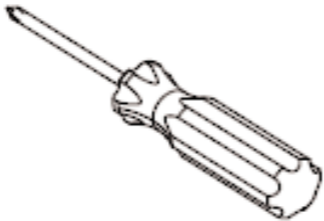

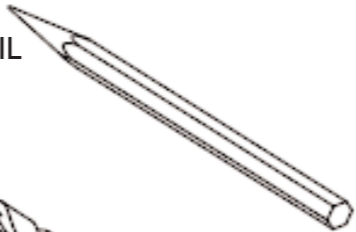

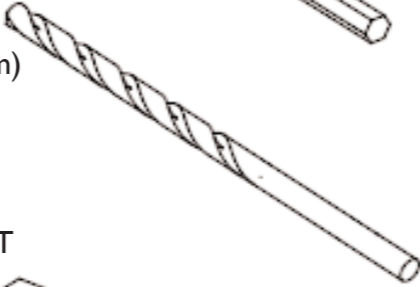
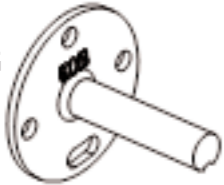
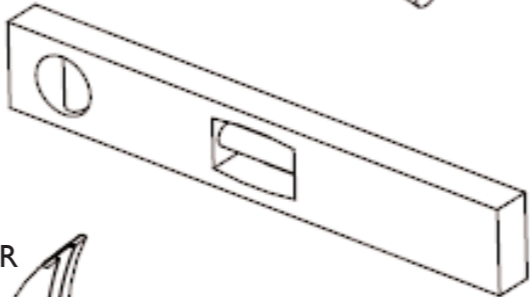

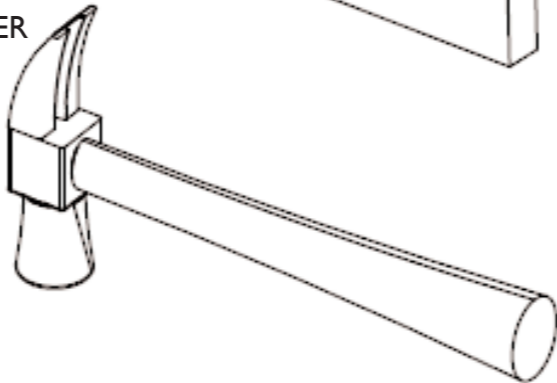

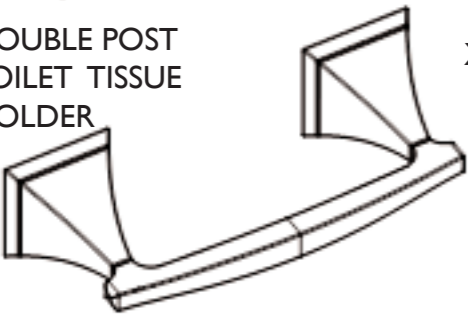


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER 
TILE ANCHOR		X 4	PEN / PENCIL 
#8 SCREW		X 4	1/4" (6mm) DRILL 
MOUNTING BRACKET		X 2	LEVEL SET 
M6 X 1 SET SCREW		X 2	HAMMER 
3MM ALLOY STEEL HEX KEY		X 1	
DOUBLE POST TOILET TISSUE HOLDER		X 1	


INSTALLATION INSTRUCTIONS

DOUBLE POST PIVOTING TOILET TISSUE HOLDER




2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

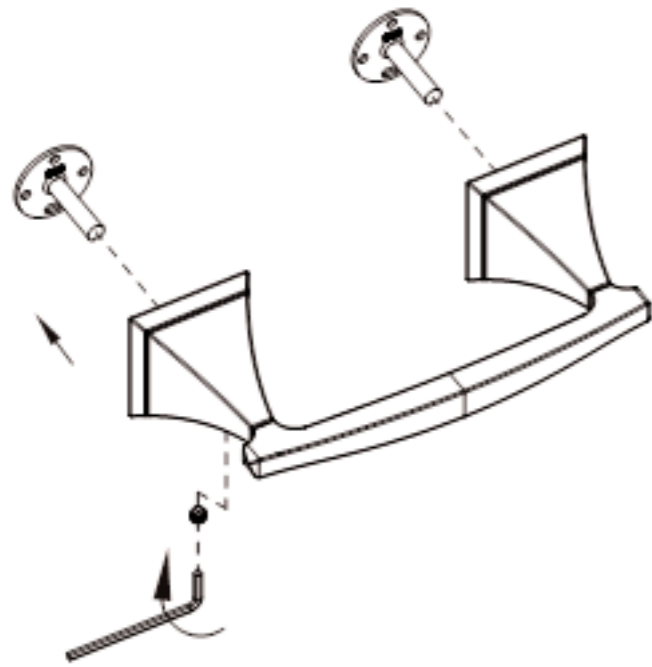

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

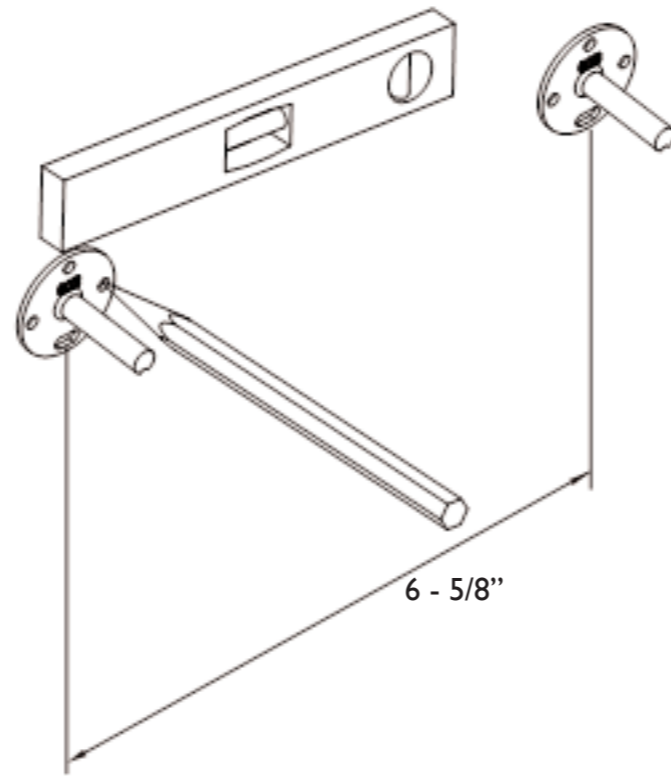


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

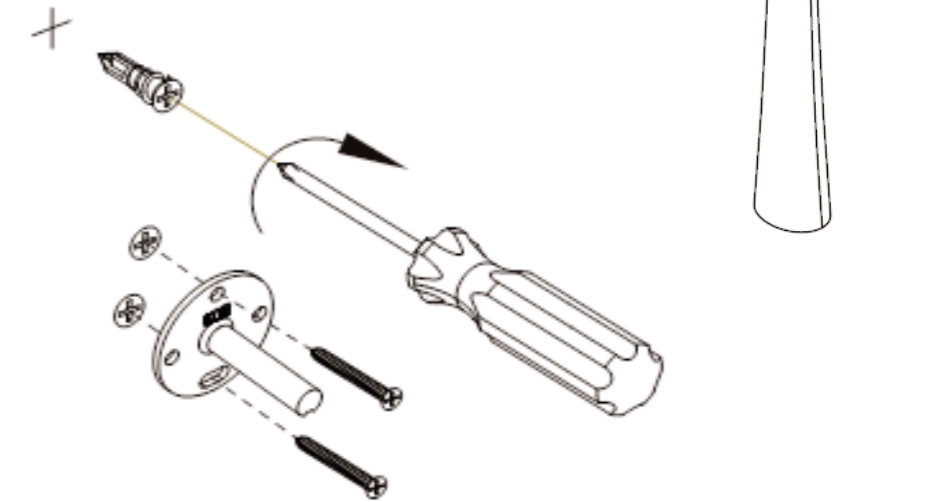


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

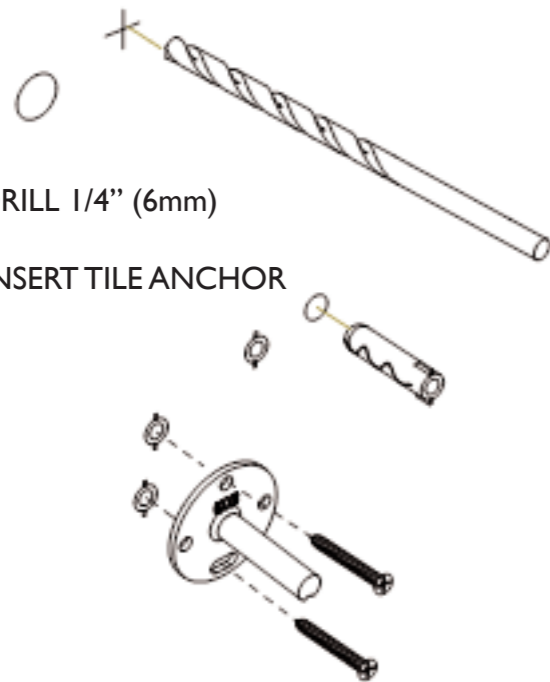

⑤ INSTALL PRODUCT ONTO BRACKETS

SECURE WITH SET SCREW

