

# NEWPORT BRASS


Flawless Beauty. From Faucet to Finish.

## INSTALLATION INSTRUCTIONS INSTRUCCIONES DE INSTALACIÓN


SPOUT  
CHORREAR

WALL MOUNT  
MONTAJE EN PARED

SPOUT WITHOUT ADAPTER  
CAÑO SIN ADAPTADOR

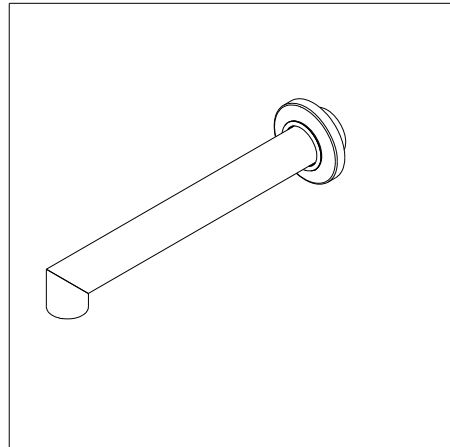

SPOUT WITH ADAPTER  
CAÑO CON ADAPTADOR

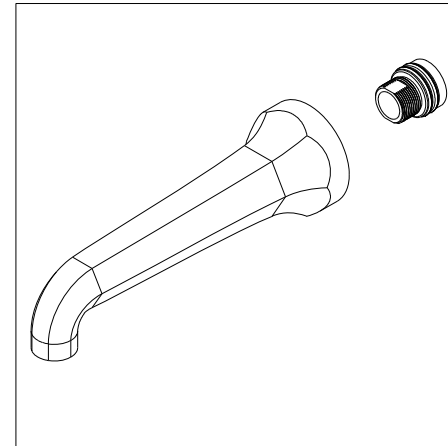

OR


REPRESENTATIVE IMAGE SHOWN IDENTIFY YOUR PRODUCT  
IMAGEN REPRESENTATIVA MOSTRADA IDENTIFIQUE SU PRODUCTO

RECOMMEND INSTALLATION BY A PROFESSIONAL PLUMBING CONTRACTOR  
RECOMIENDE LA INSTALACIÓN A UN CONTRATISTA DE PLOMERÍA PROFESIONAL


NOTE: THE USE OF PETROLEUM BASE PLUMBERS PUTTY ON OUR PRODUCTS WILL NULLIFY THE WARRANTY.  
WE RECOMMEND THE USE OF CLEAR SILICONE SEALING MATERIALS.  
NOTA: EL USO DE MASILLA DE PLOMERÍA A BASE DE PETRÓLEO EN NUESTROS PRODUCTOS ANULARÁ LA GARANTÍA.  
RECOMENDAMOS EL USO DE MATERIALES DE SELLADO DE SILICONA TRANSPARENTE.

SPOUT WITHOUT ADAPTER  
CAÑO SIN ADAPTADOR


1

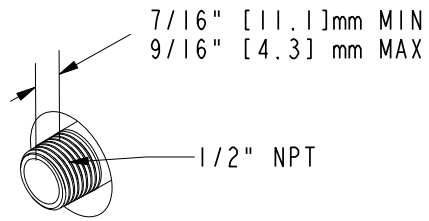

2

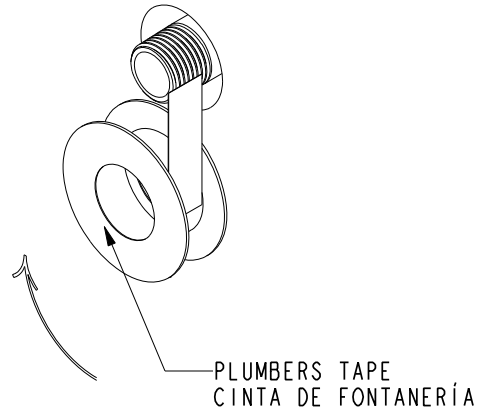


3

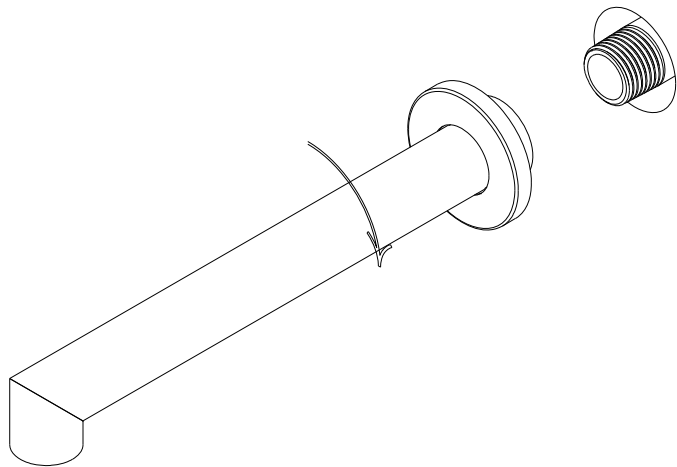

SPOUT WITH ADAPTER  
CAÑO CON ADAPTADOR

1

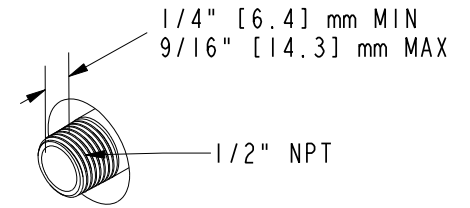

2



3

