

# INSTALLATION INSTRUCTIONS

VESPERA PULL DOWN

KITCHEN FAUCET

Model No's: 2500-5103

**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™



**Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.**

## Recommended Installation by a Professional Plumbing Contractor

**Note:** The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size x 1/2" thick), should be utilized.

1. Drill hole in mounting surface. Recommended deck hole  $\varnothing 1.350''$ , not to exceed  $\varnothing 1.562''$ .



2. Place O-ring (2) on underside of base RING (1). See **Figure 1a**.

3. Insert Hoses through hole in mounting surface. Secure into place with MOUNTING KIT (3). See **Figure 1**.



4. Attach hot/cold spout supply directly to valves in the wall. See **Fig. 2**.

5. DO NOT remove the HOSE (6) from SPOUT (4). SEE Figure 3.

6. Attach WEIGHT (9) to HOSE (6) in the appropriate area shown, on the upward swing toward the SPRAY-HEAD (5), in order to provide proper pull to hose. See **Figure 4**.

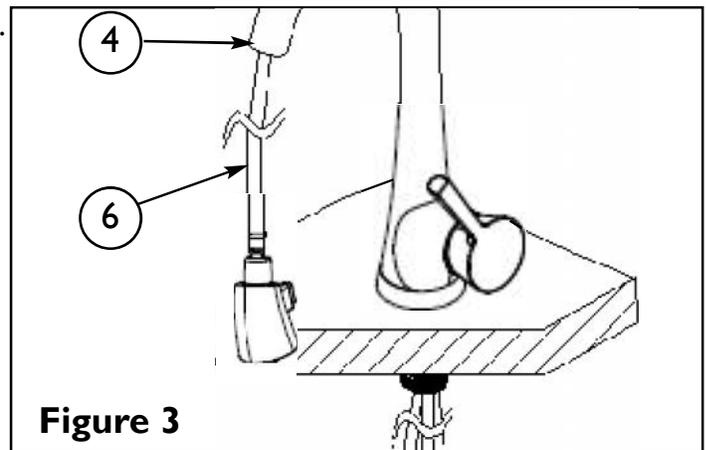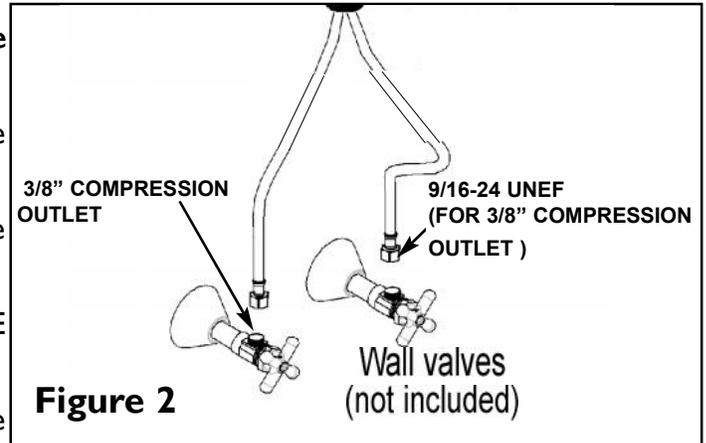

Do **NOT** remove the zip tie and ensure the hose does not rub against the hot/cold supply lines.

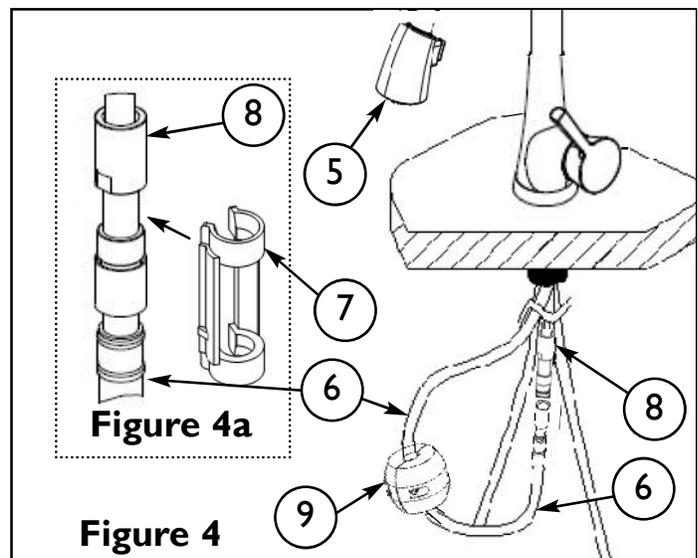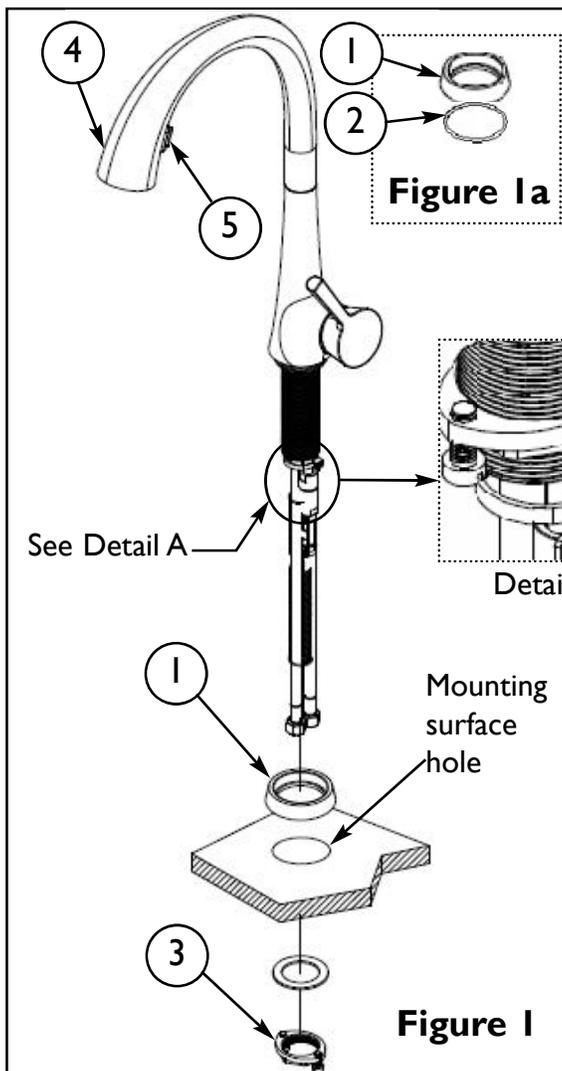



7. Connect HOSE (6) to valve outlet (8). See Figure 4. Attach CLIP (7) to the connection between HOSE (6) and OUTLET (8). See Figure 4a.

8. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.

9. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), unscrew SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.

10. Turn OFF faucet and reattach SPRAYHEAD (5) to HOSE (6). See Figure 5.

11. Check the SPRAYHEAD (5) by operating the trigger from aerator to spray.

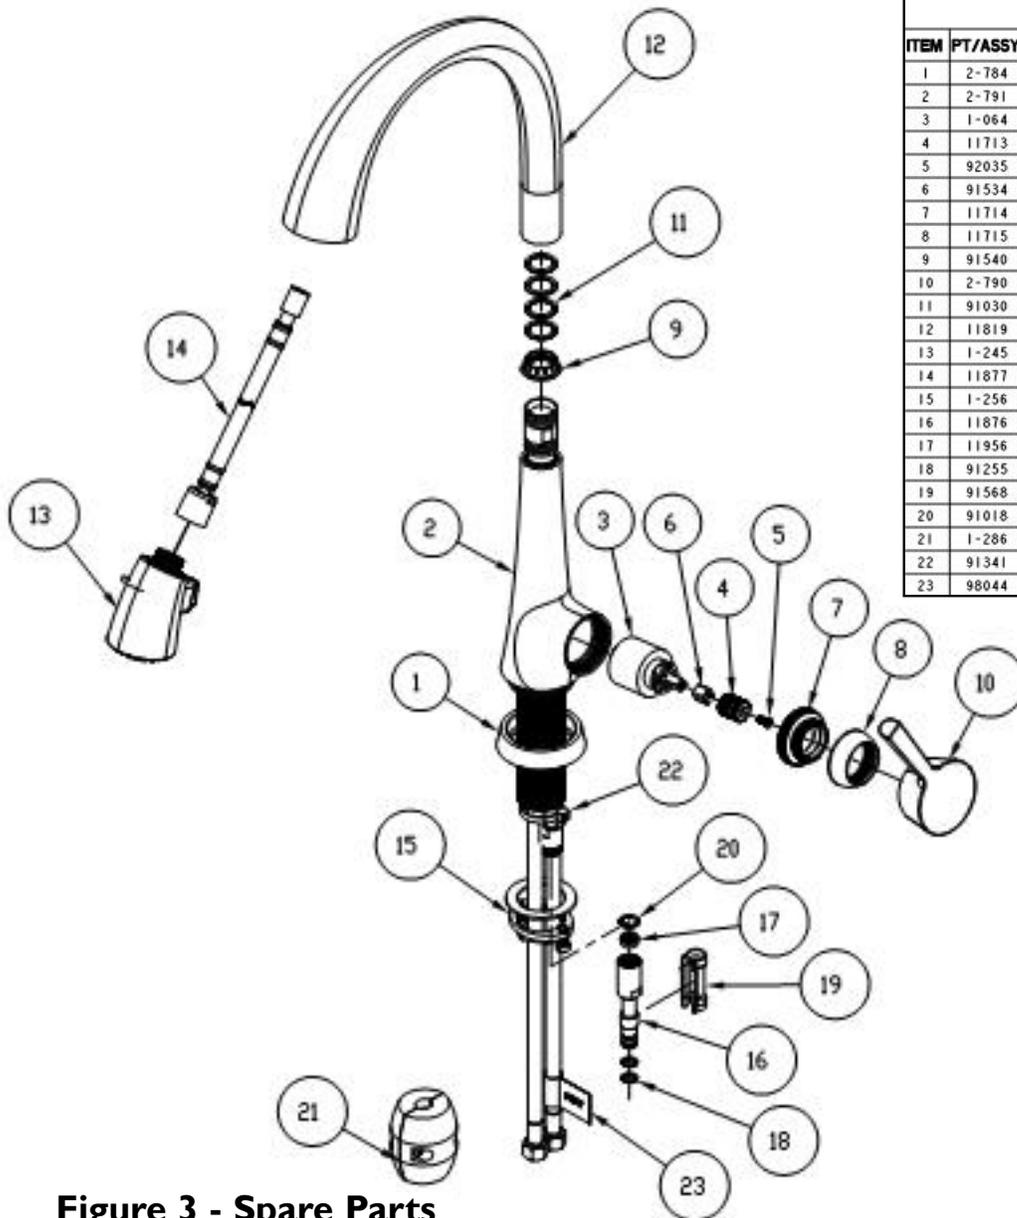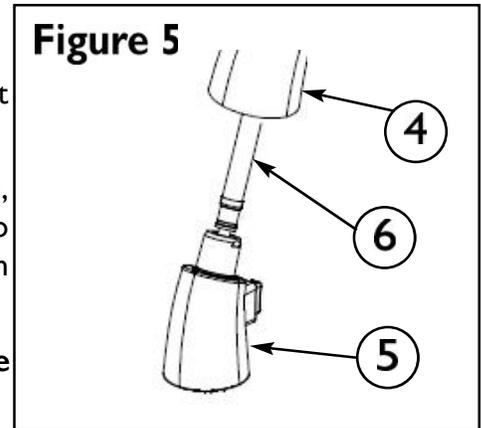

**BILL OF MATERIAL (CURRENT LEVEL)**

ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY.
1	2-784	BASE RING ASM	ASSEMBLY	1
2	2-791	MAIN BODY ASM , VESSA	ASSEMBLY	1
3	1-064	SINGLE LEVER CARTRIDGE	PART	1
4	11713	CARTRIDGE STEM ADAPTER	PART	1
5	92035	SCRW, M4 X .7 X 10 PHL FLT HD SS	PART	1
6	91534	CARTRIDGE STEM INSERT	PART	1
7	11714	CARTRIDGE RETAINER	PART	1
8	11715	CARTRIDGE CAP	PART	1
9	91540	SWIVEL SLEEVE, BOTTOM	PART	1
10	2-790	HANDLE ASM	ASSEMBLY	1
11	91030	O-RING, #2- 115, EPDM, 65-75 DURO, NSF 61	PART	4
12	11819	SPOUT, VESSA	PART	1
13	1-245	SPRAY HEAD, VESPERA	ASSEMBLY	1
14	11877	HOSE, PULLDOWN SWIVEL	ASSEMBLY	1
15	1-256	MOUNTING KIT	ASSEMBLY	1
16	11876	OUTLET ADAPTER, LOWER	PART	1
17	11956	FLOW REGULATOR, 1.75 GPM, LIGHT BLUE	PART	1
18	91255	O-RING, #2- 011, EPDM, 65-75 DURO, NSF-61	PART	2
19	91568	RETAINER CLIP	PART	1
20	91018	O-RING, #2- 013, EPDM, 65-75 DURO, NSF-61	PART	1
21	1-286	WEIGHT ASM	ASSEMBLY	1
22	91341	ZIP TIE	PART	1
23	98044	LABEL - HOT	PART	1

**Figure 3 - Spare Parts**