


## INSTALLATION INSTRUCTIONS

HOT MOP ADAPTER : 277-01A, 277-02A

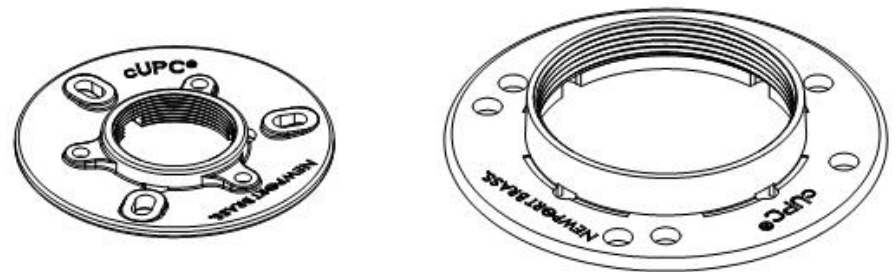


**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

2001 E.CARNEGIE AVE, SANTA ANNA CA 92705  
(949) 417-5207  
WWW.GINGERCO.COM

## STEP 1

REMOVE BOLTS AND SAVE TO USE WITH HOT MOP ADAPTER

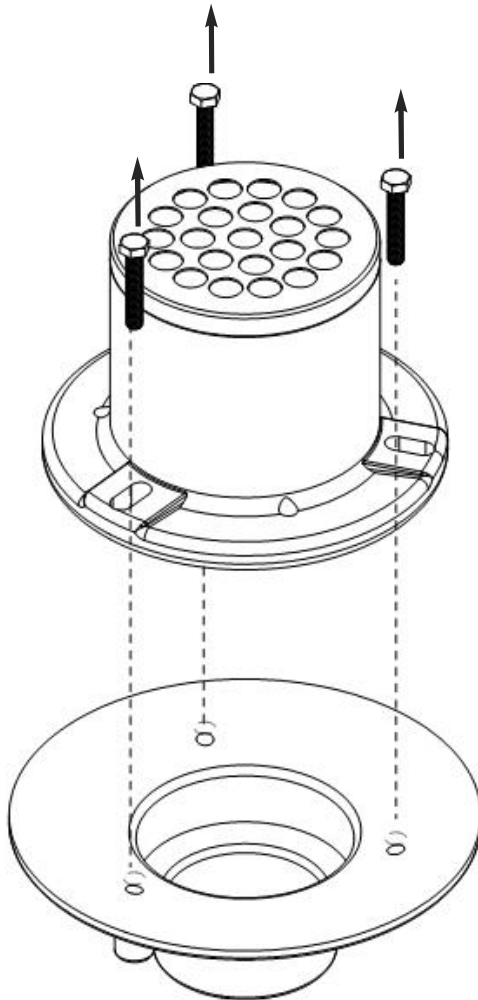

## STEP 2

-PERFORM HOT MOP OR WATER PROOFING STEPS PER WATER PROOFING STANDARDS, MANUFACTURER REQUIREMENTS AND /OR LOCAL/CITY PLUMBING CODES.

-ATTACH HOT MOP ADAPTER WITH SCREWS SAVED IN STEP 1. ENSURE ADAPTER IS INSTALLED LEVEL.

