



Flawless Beauty. From Faucet to Finish.™


Model No. 30-10, 30-12, 30-13, 30-27, 30-30


Recommended Installation by a Professional Contractor


- I. Hold the BASE (I) up to desired location and mark the hole locations on flange. (See Fig. I)
- 2. Drill holes in wall at points marked using the appropriate drill size:
- ·Wood Screw (#6 x 2") use: 3/32" Drill
- ·Toggle Screw (6-32 x 3") use: 3/8" Drill
- 3. Fasten BASE (I) to wall using either WOOD/TOGGLE SCREWS (2). (See Fig. I)
- 4. Thread ADAPTER (3) onto BASE (1). Insert POST (4) into ADAPTER (3). Position POST (4) Height to 2 5/16" from mounting surface and secure in place by tightening the SETSCREW (5). (See Fig. 2)
- 5. Place NUT (6), BONNET (7), and ESCUTCHEON (8) over wall mounted POST (4). (See Fig. 3).
- **5a. Open Towel Ring:** Slide END POST (9) onto POST (4) and secure into place with SETSCREW (5). (See Fig. 4)
- **5b. Single/Double Garment Hook:** Slide END POST (9) onto POST (4) and secure into place with SETSCREW (5). (See Fig. 5)
- **5c. Single Post Tissue Holder:** Slide END POST (9) onto POST (4) and secure into place with SETSCREW (5). (See Fig. 6)
- **5d. Reserve Tissue Holder:** Slide END POST (9) onto POST (4) and secure into place with SETSCREW (5). (See Fig. 7)
- 6. If needed, adjust BASE position to acheive correct alignment of accessory.

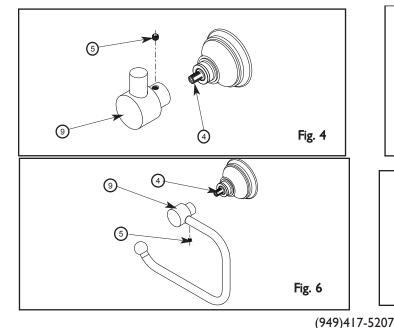


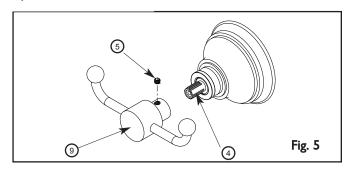

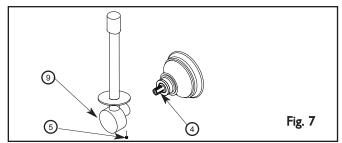

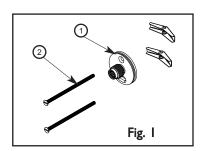

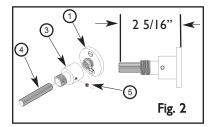

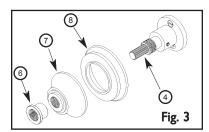

Santa Ana CA 92705 9/13/2011 www.brasstech.com