




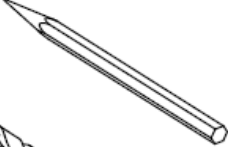







| ITEMS INCLUDED      |   |   | TOOLS REQUIRED   |
|---------------------|---|---|--|
| DRY WALL ANCHOR     |    | X 4   | PHILLIPS SCREW DRIVER  |
| TILE ANCHOR         |    | X 4   |   |
| #8 SCREW            |    | X 4   | PEN / PENCIL   |
| MOUNTING BRACKET    |    | X 2   |   |
| M5X5 SET SCREW      |    | X 2   | 1/4"(6 mm) DRILL   |
| 2.5 MM HEX KEY      |  | X 1   | LEVEL SET  |
| TOWEL BAR WITH HOOK | X 1   |  | HAMMER   |
|                     |   |   |  |
|                     |   |   |  |

NWP - 39-02  
EN-1984

# KIARA
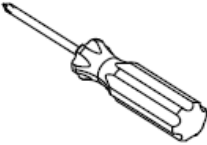
## INSTALLATION INSTRUCTIONS

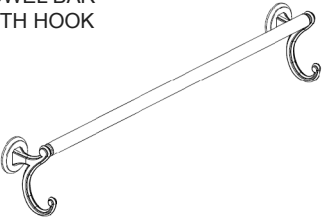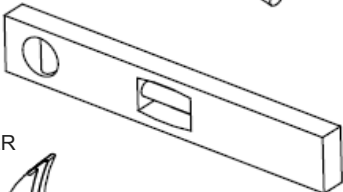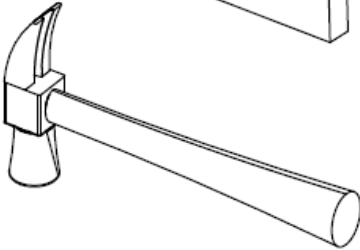39-02

### 24" TOWEL BAR WITH HOOK


**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705


(949) 417-5207  
WWW.NEWPORTBRASS.COM

REV -

① REMOVE MOUNTING BRACKETS

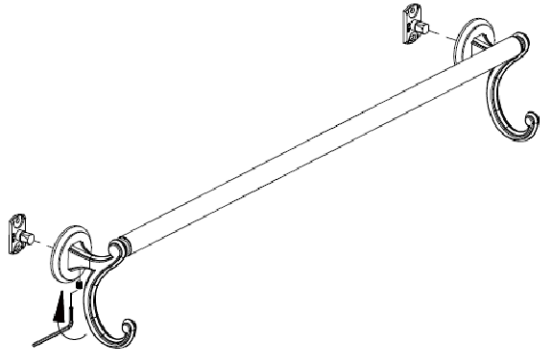

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

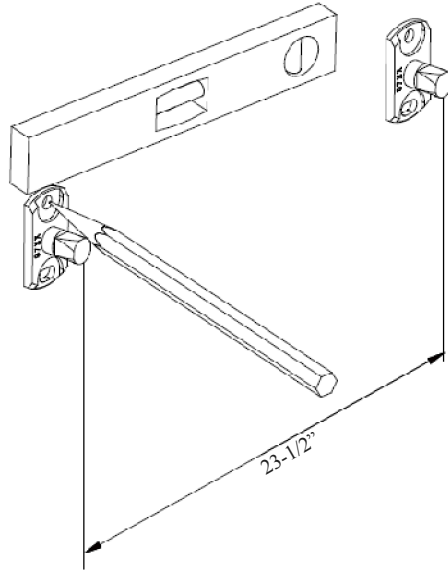


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS  
MADE IN STEP 2

TAP IN UNTIL  
THREADS ARE  
REACHED

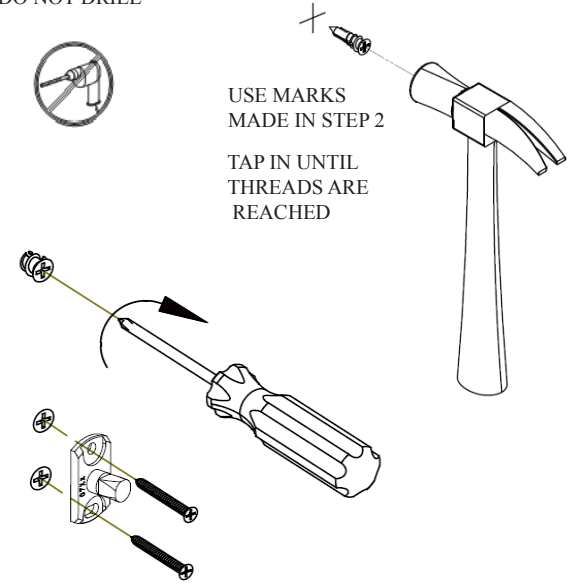


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

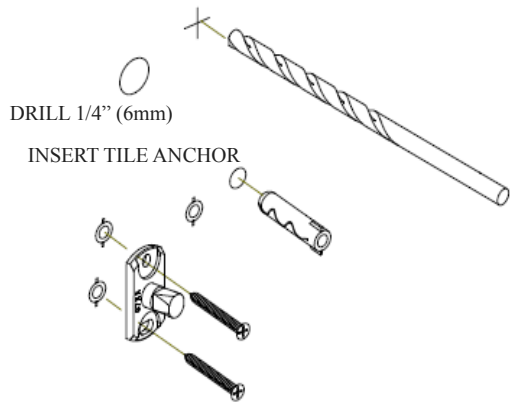

⑤ INSTALL PRODUCT ONTO BRACKETS

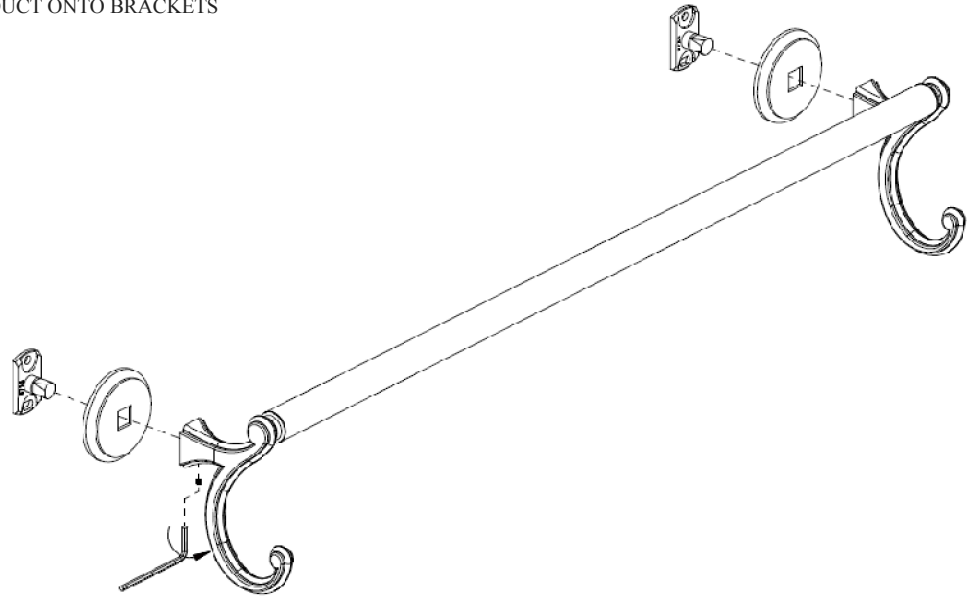

SECURE WITH SET SCREW