


Installation Instructions

Towel Ring / Garment Hook

Model No. 75-09, 75-12

Recommended Installation by a Professional Contractor

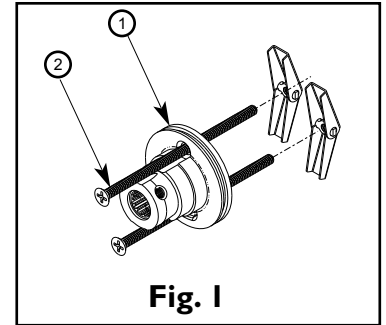


1. Drill holes in wall at points marked using the appropriate drill size:

- Wood Screw (#10 x 1 3/4") - use: 1/8" Drill
- Toggle Screw (6-32 x 3") - use: 3/8" Drill

2. Fasten BASE (1) to wall using either WOOD/TOGGLE SCREWS (2). (See Fig. 1)
Align the BASE (1) so that upper flat is level.

3. Thread ESCUTCHEON (3) onto BASE POST (1). (See Fig. 2)

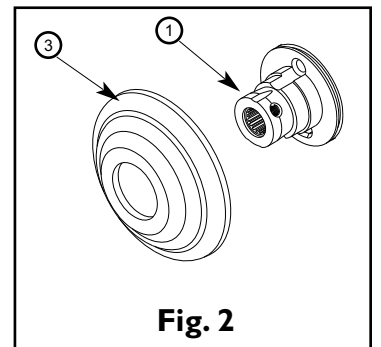

4a. Towel Ring: Slide END POST (5) onto BASE POST (1) and secure into place with SETSCREW (4). (See Fig. 3)

4b. Garment Hook: Slide END POST (5) onto BASE POST (1) and secure into place with SETSCREW (4). (See Fig. 4)

